



SP-BC0006

SP-BC2036

SP-BC2037

Side Rails (L & R)

200 x 3 x 0.6cm


SP-BC0007 Front Seal Strip 150 x 3 x 1.6cm








1 APPLYING SEAL STRIP ①

IF THE TRUCK'S FRONT BED RAIL IS LOWER THAN THE SIDES, USE THE PROVIDED WEATHER SEAL STRIPS. GAPS ON THE FRONT BED AND TAILGATE CAN CAUSE NOISE AND FLAPPING ISSUES WHILE DRIVING ALONG WITH WATER LEAKAGE.

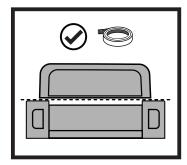

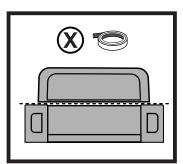

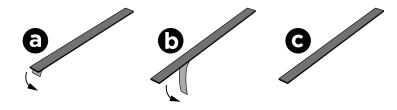

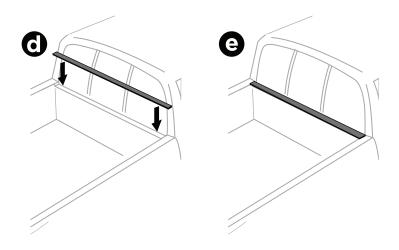



NOTES



SP-BC2004B


NOTES

The front and rear clamps should be positioned as close to the end as possible to minimize tension to the rail.

2 INSTALLING SIDE RAILS ①


• PLACE THE DRIVER-SIDE COVER RAIL ON THE DRIVER-SIDE BED RAIL. THEN EVENLY SPACE AND ATTACH THE SUPPLIED CLAMPS TO SECURE THE SIDE RAIL TO THE BED RAIL LIP. DO NOT TIGHTEN CLAMPS UNTIL COVER IS FITTED PROPERLY. FOLLOW THE SAME STEPS FOR THE PASSENGER-SIDE.

NOTE: FOR TOYOTA AND NISSAN MODELS WITH FACTORY UTILITY TRACKS, REFER TO PAGE 11-12 FOR SPECIAL INSTRUCTION ON UTILITY TRACK BRACKET INSTALLATION.

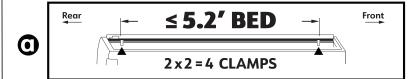






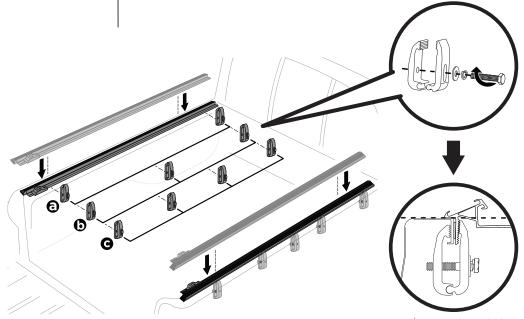






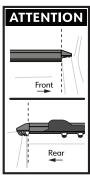


NOTE

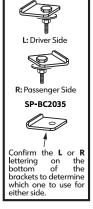


3 INSTALLING COVER ASSEMBLY ①

- PLACE THE COVER ASSEMBLY ON THE FRONT BED RAIL. MAKE SURE THE FRONT RUBBER SEAL IS NOT TUCKED UNDER THE COVER.
- FEED THE T-BOLT THROUGH THE TABS ON THE COVER ASSEMBLY AND INTO THE SLOTTED HOLE ON THE SIDE RAILS AND BOTTOM BRACKETS.
- TIGHTEN WITH THE SUPPLIED LOCK WASHER AND NUT TO SECURE THE BULKHEAD ASSEMBLY.

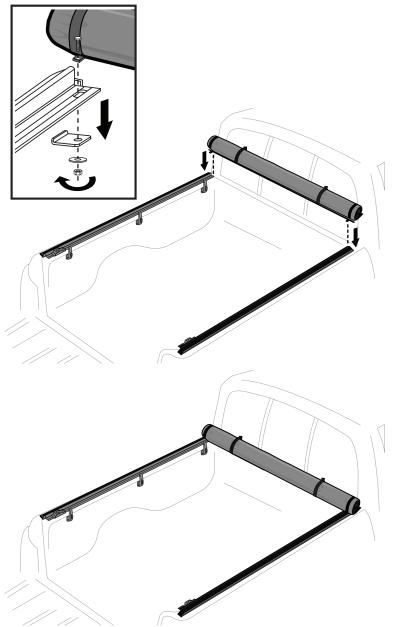



(i)

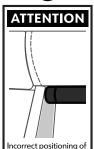

ATTENTION

the crossbars can cause water to pool on the cover.



Horizontal crossbars are arched by design to help drain and prevent water pooling. Make sure the arched side is facing up during installation.

(i)




NOTE

position can cause damage to the channel.

For latching issue, refer to **PAGE 10** for trouble shooting instruction.

4 ROLLING OUT THE COVER ①

- UNHOOK THE SAFETY STRAPS
- MAKE SURE THE ENDS OF THE CROSSBARS ARE RESTING ON THE SIDE RAIL LEDGES AND CROSSBARS ARE ARCHED UPWARD.

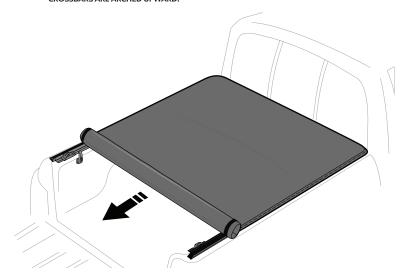

6 LOCKING THE COVER ①

- PUSH DOWN THE END OF THE COVER WITH SUFFICIENT FORCE TO CLOSE IT.
- THE COVER MUST BE CLOSED FIRST BEFORE YOU SHUT THE TAILGATE.










NOTE



Velcro Strips must be fully fastened to prevent water from leaking in.

6 STRAIGHTENING OUT THE COVER ①

• STRETCH OUT THE COVER TARP ON BOTH SIDES TO REMOVE ANY WRINKLES AND MAKE SURE BOTH VELCRO STRIPS ARE PROPERLY FASTENED AND SEALED TO PREVENT WATER LEAK.

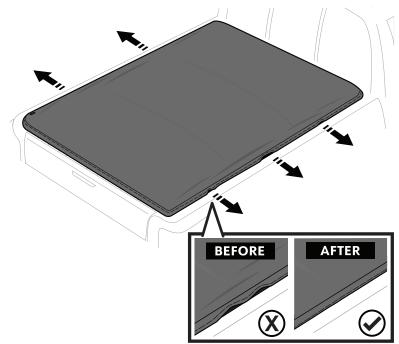




CHECKING FOR GAPS ①


WITH THE TAILGATE OPEN, VISUALLY INSPECT FOR LIGHT LEAKING THROUGH THE GAPS.

APPLY ADDITIONAL SEALING STRIPS TO FILL THE GAPS THEN REINSPECT AND REPEAT.



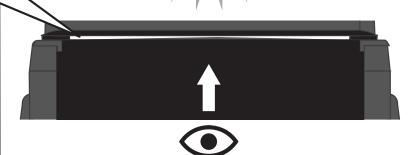

INSTALLATION COMPLETE!!!

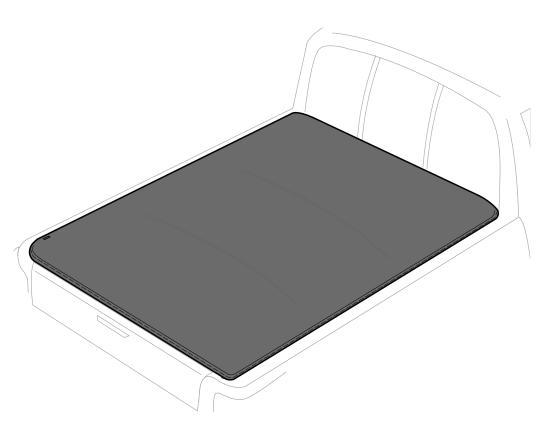




Pressing down on the cover edge will improve


the release.

AFTER INSTALLATION

8 RELEASING THE COVER ①

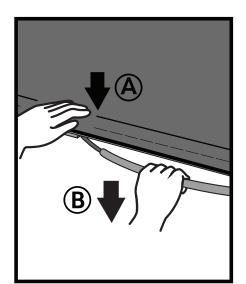

- OPEN THE TAILGATE AND PUSH DOWN AGAINST THE COVER EDGE WITH ONE HAND.
- B * PULL ON LATCH CABLE TO RELEASE THE COVER WITH THE OTHER HAND.

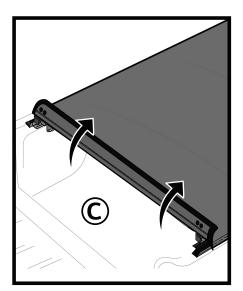

• ROLL UP THE COVER CLOSELY.

(i)

ATTENTION

Make sure the cover is free from any debris before rolling it up. Safety straps must be buckled and tightened before driving.

NOTE

Cover may not fully cover all the way to the outer edges of the bed rails due to small variance in bed sizes from different year models.



DO NOT overload cargo



Secure strap buckles before driving





Remove snow before rolling up cover



Use water and soap to clean. Avoid abrasive chemical cleaners

9 ROLLING UP THE COVER ①

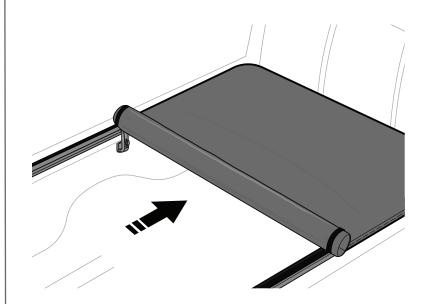

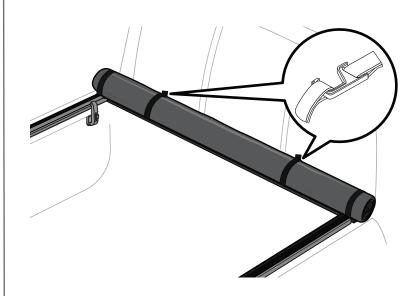






THE TENSION CONTROL SYSTEM ①

NOTE: TENSION PLATE ADJUSTMENT IS NOT REQUIRED FOR BRAND-NEW TONNEAU COVERS.

IF THE TENSION BETWEEN THE BULKHEAD & TENSION PLATE HAS BECOME LOOSE OR TIGHT OVER TIME. YOU CAN ADJUST THE TENSION PLATE POSITION TO IMPROVE THE TENSION CONTROL.

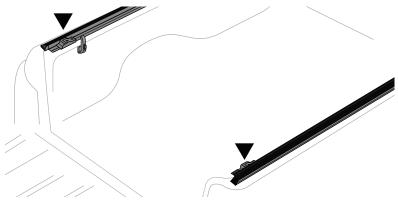

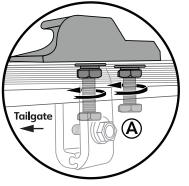


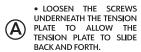



NOTE

Only move one increment at a time. Each increment gives you 1/8" of tension adjustment. Apply the same adjustment to both sides' tension plates.

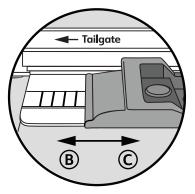

- TO TIGHTEN THE TENSION (LATCH IS TOO LOOSE), MOVE THE TENSION PLATE TOWARDS THE TAILGATE.
- TO LOOSEN THE TENSION (LATCH IS TOO TIGHT), MOVE THE TENSION PLATE AWAY FROM THE TAILGATE.



FOR MODELS WITH **UTILITY TRACKS**


NOTE: REFER TO PAGE 3 FOR CLAMP ASSEMBLY BREAKDOWN IN RELATION TO OTYS VS BED SIZE





SP-BC2005

For **NISSAN FRONTIER** ①

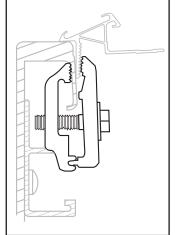


• FOR NISSAN FRONTIER WITH FACTORY UTILITY TRACK, REFER TO THE ILLUSTRATION TO THE LEFT ON HOW TO SLIDE THE BRACKETS INTO THE TRACK AND TO HELP VISUALIZE THE CORRECT WAY TO TIGHTEN THEM. REFER TO THE ILLUSTRATION IN PAGE 2 TO DETERMINE TO THE CORRECT BRACKET POSITIONING.








For **NISSAN TITAN** ①

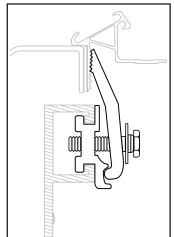

FOR NISSAN TITAN WITH FACTORY
UTILITY TRACK, REFER TO THE
ILLUSTRATION TO THE LEFT ON HOW
TO SLIDE THE BRACKETS INTO THE
TRACK AND TO HELP VISUALIZE THE
CORRECT WAY TO TIGHTEN THEM.

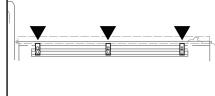



For **TOYOTA TACOMA** (i) For **TOYOTA TUNDRA** (i)







