



INSTALLATION INSTRUCTIONS

Under Seat Drawer Part #021, #130

Please read and fill out the enclosed warranty registration card to activate your warranty.

The mounting instructions for this drawer are enclosed with the mounting kit (sold separately).

*****NOTICE*****

THERE IS A PROTECTIVE METAL SHIPPING BRACKET WHICH WILL HAVE TO BE REMOVED AND DISCARDED. REMOVE IT BY UNFASTENING THE (4) SCREWS HOLDING IT TO THE DRAWER AND ENCLOSURE.

ALSO, THE HANDLE IS PACKAGED INSIDE THE DRAWER FOR SHIPPING PURPOSES MAKING THE DRAWER DIFFICULT TO OPEN THE FIRST TIME. TO OPEN DRAWER THE FIRST TIME DO THE FOLLOWING:

- UNLOCK THE DRAWER BY TURNING THE KEY 180 DEGREES CLOCKWISE TO THE UNLOCKED POSITION
- PUSH LOCK BUTTON ALL THE WAY IN WHILE SLIDING DRAWER OUT FROM ENCLOSURE

WE RECOMMEND PLACING HAND UNDER LEFT SIDE OF DRAWER AND PUSHING UP WHILE PULLING OUT WITH PUSH BUTTON LOCK DEPRESSED

ATTENTION:

FREQUENT LUBRICATION IS NECESSARY ON THE LOCKING SYSTEM

The pushbutton lock contains an "O" ring seal to protect the interior from dust and water. If this mechanism is not lubricated regularly it will become difficult to operate and it may not return to its home position preventing the key from operating the lock. If this happens simply pull up on the pushbutton to manually bring it back to its home position. Lubricate the pushbutton with a light lubricant such as silicone spray. The pushbutton may have to be periodically disassembled and cleaned.

Call (970) 564-1762 for Technical Support