




INSTALLATION INSTRUCTIONS

PART No. 30515

MODEL No.

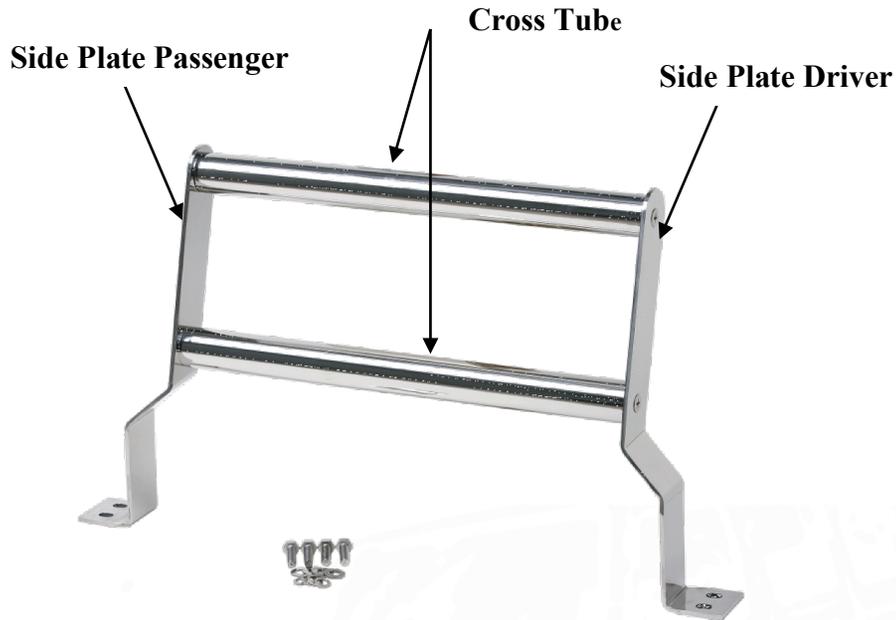

Place cross tubes in place on the side plates, fasten using the 82 Degree countersunk head bolts provided and tighten all four bolts.


Remove the top bumper bolts from your vehicle, using the hex head bolts provided bolt the brush guard to your frame.



INSTALLATION INSTRUCTIONS

PART No. 30515

MODEL No.

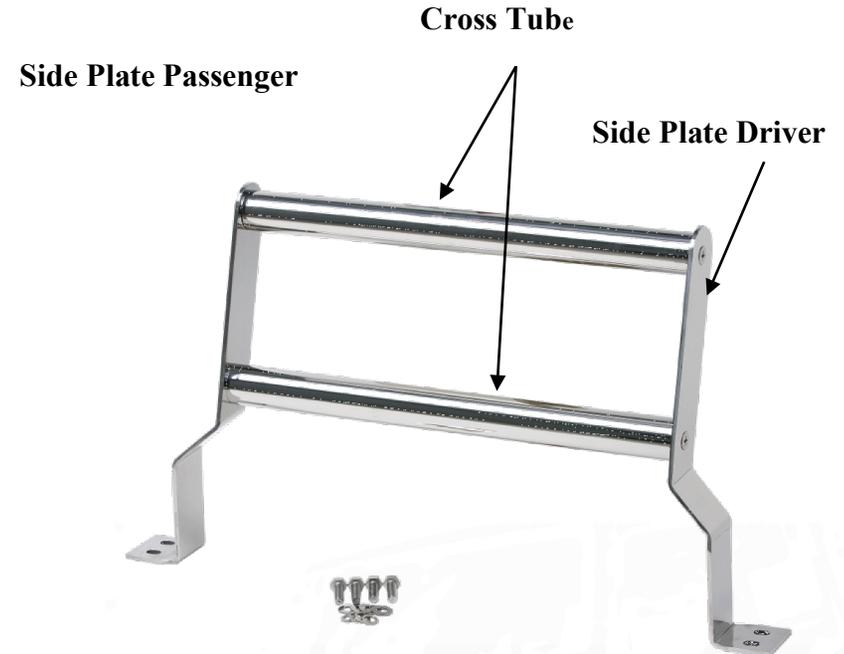

Place cross tubes in place on the side plates, fasten using the 82 Degree countersunk head bolts provided and tighten all four bolts.

Remove the top bumper bolts from your vehicle, using the hex head bolts provided bolt the brush guard to your frame.