




INSTALLATION INSTRUCTIONS

PART No. 30518

MODEL No.

Side Steps

Position the side step by sliding the rails into the frame slots and over the U-Bolts. Secure with the 3/8" hex nuts provided. Tighten the hex nuts using 25ft-lbs of torque.

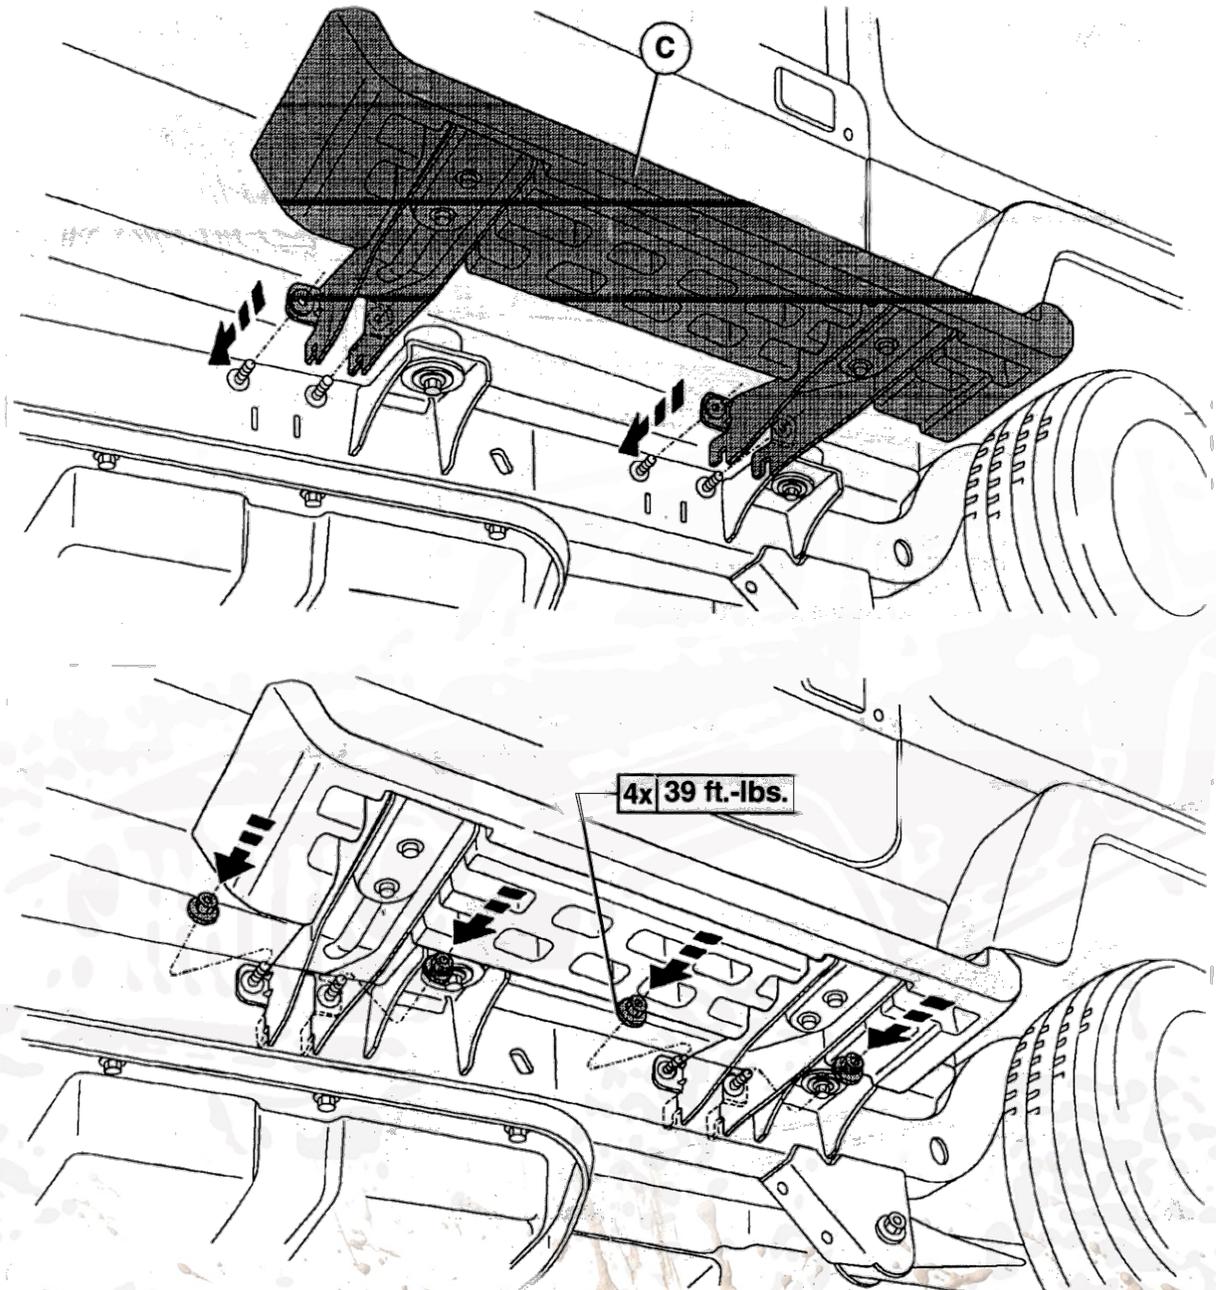




INSTALLATION INSTRUCTIONS

PART No. 30518

MODEL No.

Side Steps

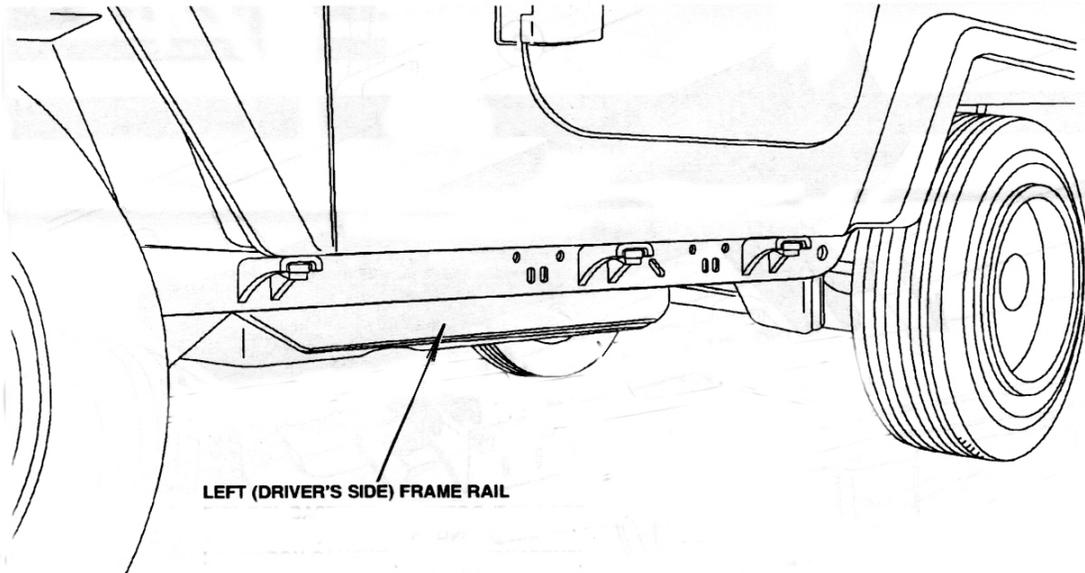

Place the U-Bolt (A) in the frame holes and secure with the nylon washers (B) provided

