



TYGER®

STAR STRIDER®

TG-SR2T74938

Scan to Download the Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT:

WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES



Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- | | | |
|---|--|-----------------------------------|
| x1 Driver Side Star Strider [D] | x1 Driver Side Rear Bracket [C] | x16 8mm Nylon Lock Nuts |
| x1 Passenger Side Star Strider [P] | x1 Passenger Side Rear Bracket [F] | x32 8mm x 24mm x 2mm Flat Washers |
| x1 Driver Side Front Bracket [A] | x1 Driver Side Support Bracket [G] | x12 8mm Lock Washers |
| x1 Passenger Side Front Bracket [D] | x1 Passenger Side Support Bracket [H] | |
| x1 Driver Side Center Bracket [B] | x6 8-1.25mm x 35mm Double Bolt Plate | |
| x1 Passenger Side Center Bracket [E] | x16 8-1.25mm x 30mm Hex Bolts | |



Parts List

Top View



ATTENTION: Refer to **[D]** and **[P]** labelling on the side of the tubes to determine Driver and Passenger Star Striders

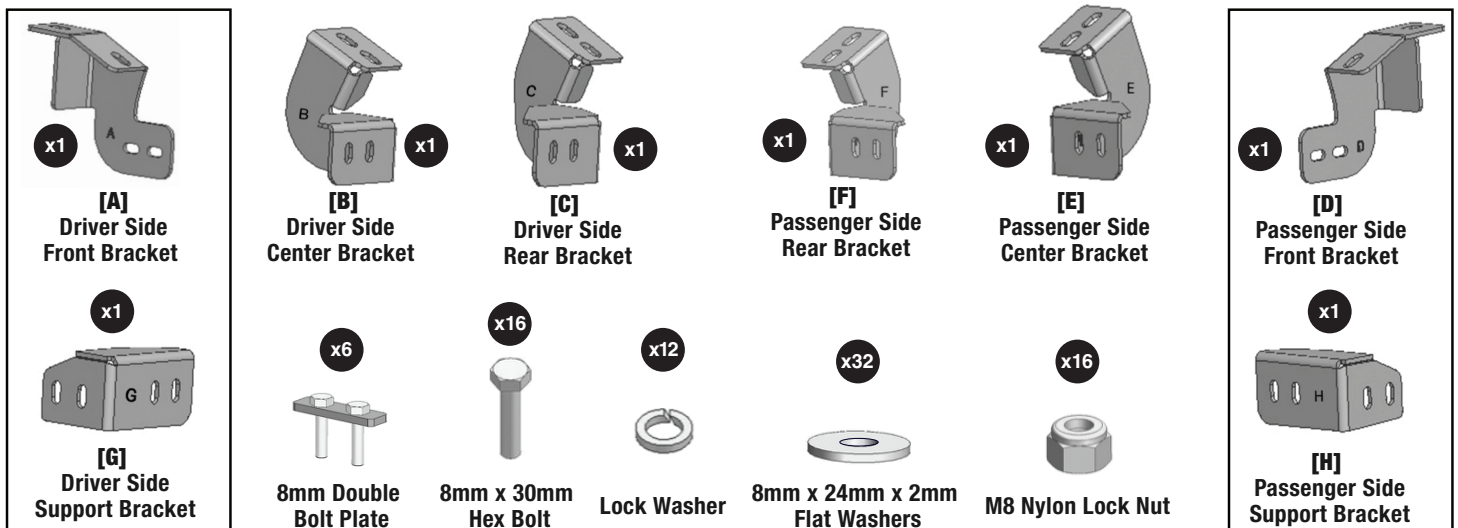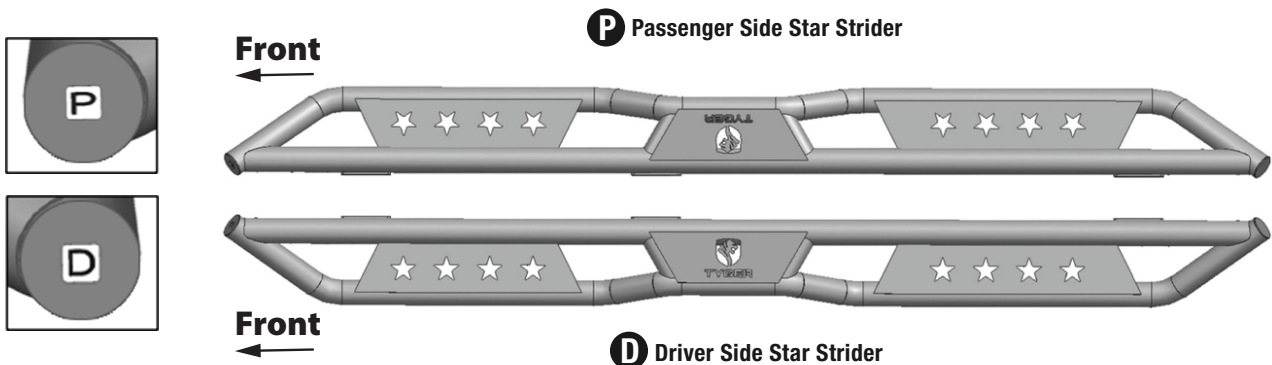


Reference the letters printed on the brackets to determine mounting locations

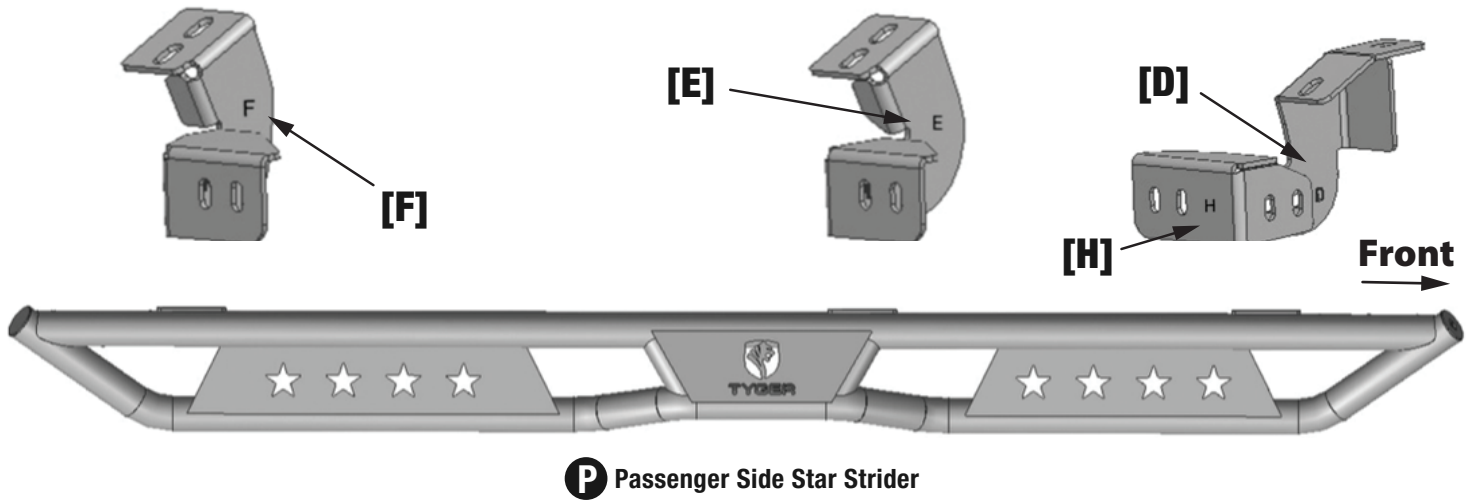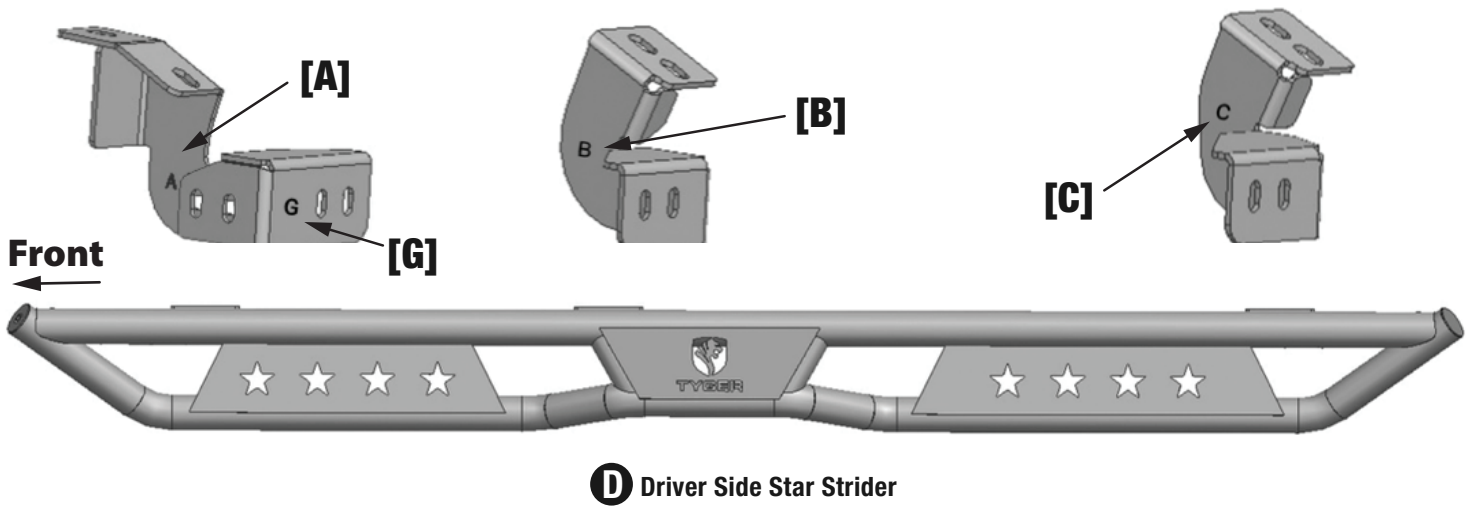

Bottom View

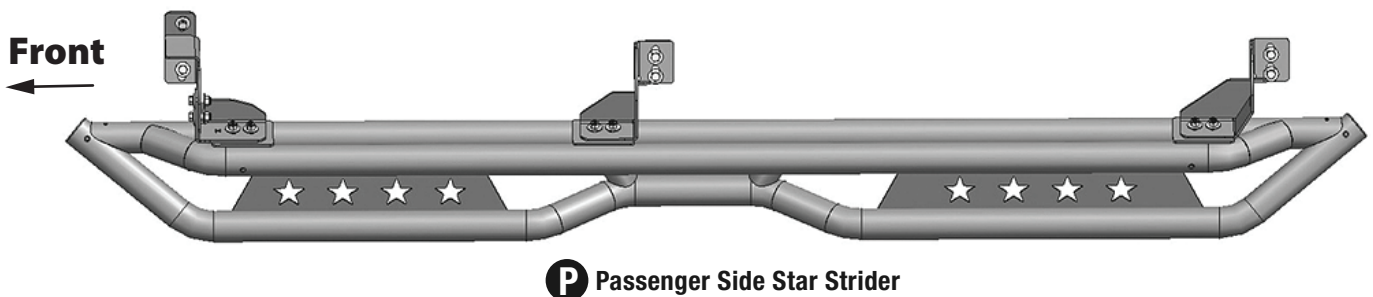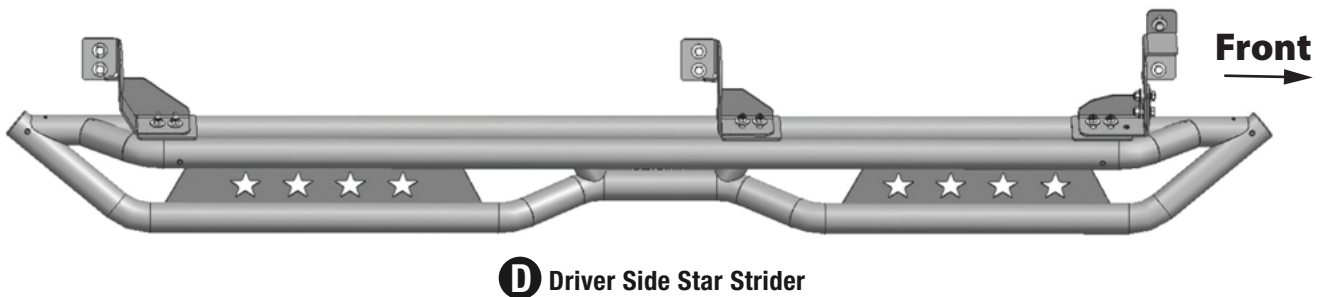


TOOLS REQUIRED

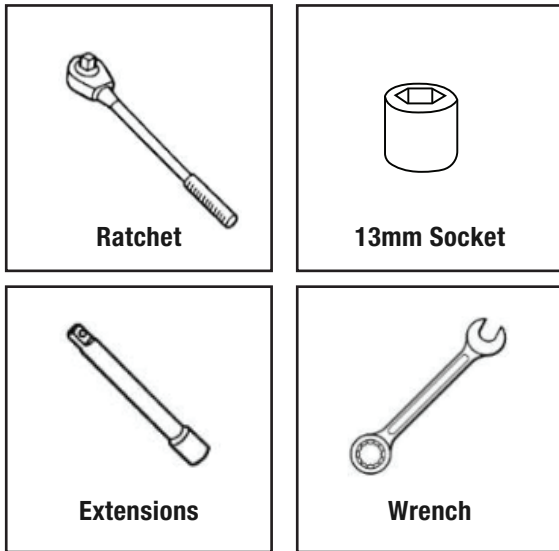


STEP 1 MOUNTING BRACKETS




Follow (Fig 1-11) to attach the brackets to the Passenger Side.


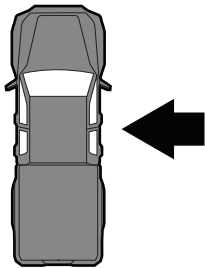


Passenger-side Front Mounting Area

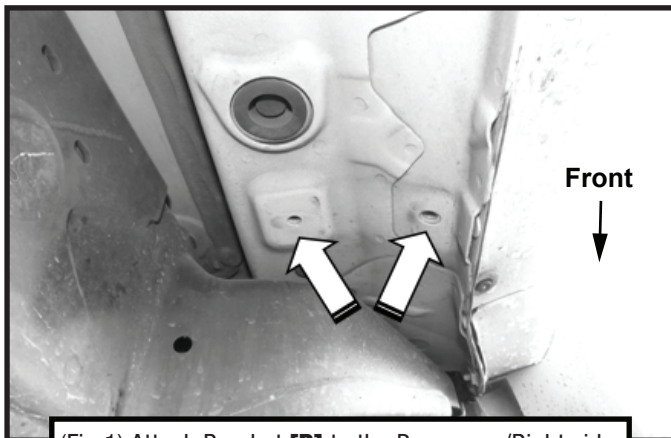





(Fig 1) Attach Bracket **[D]** to the Passenger/Right side front mounting location with threaded insert

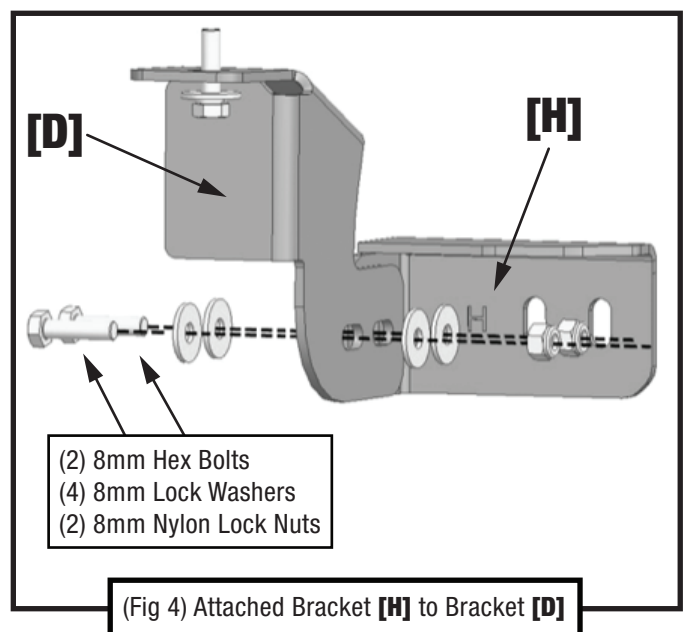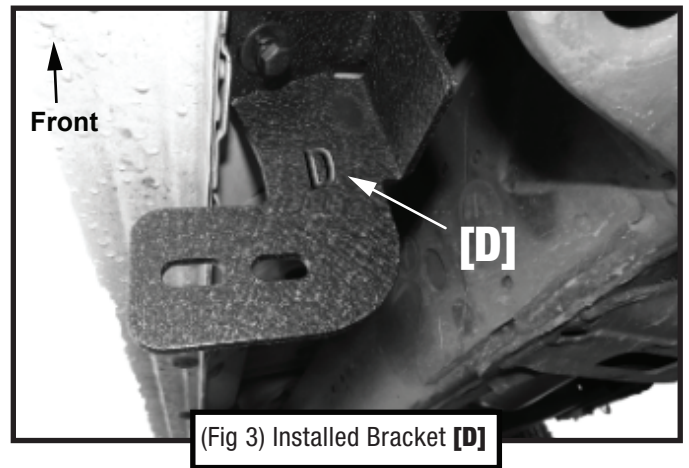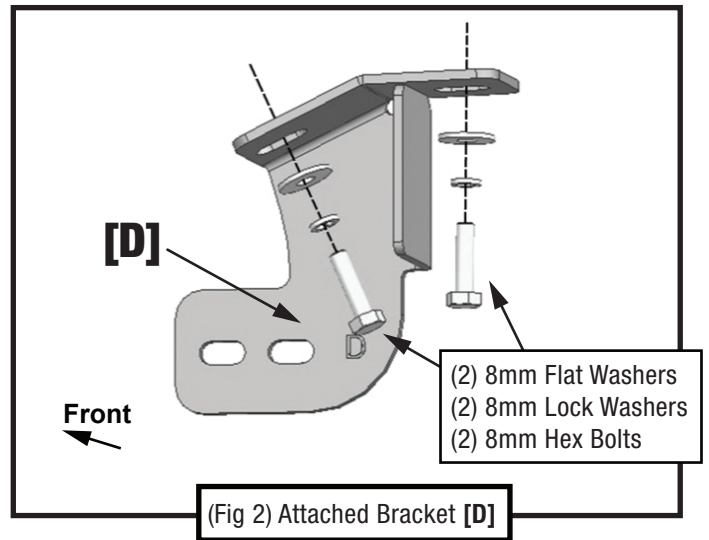


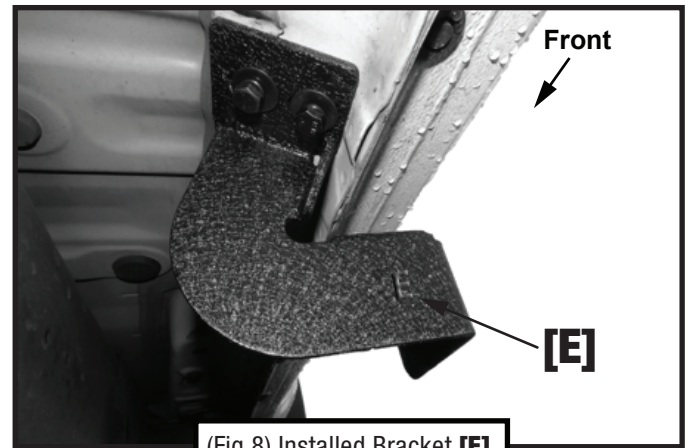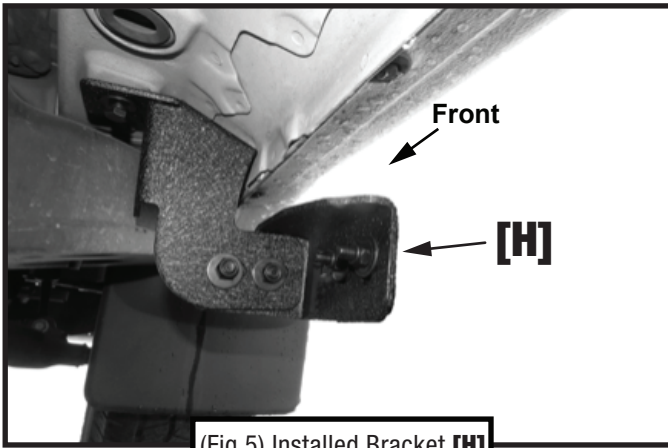

Passenger-side Center Mounting Area

Passenger-side Rear Mounting Area

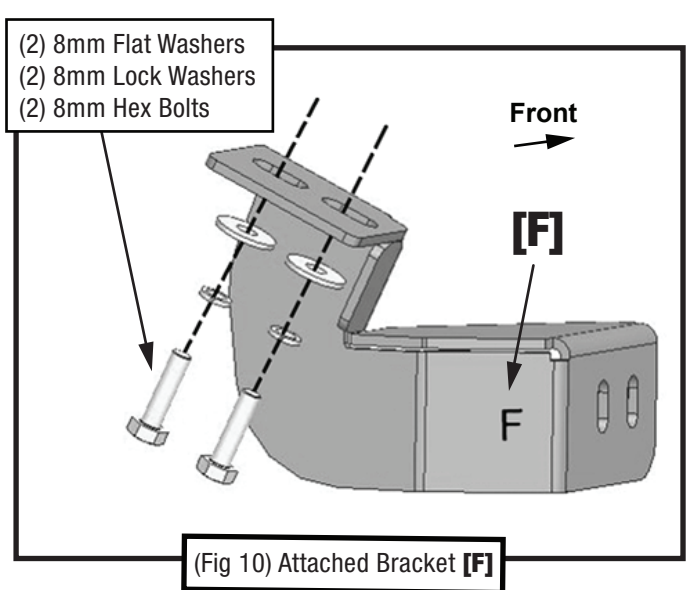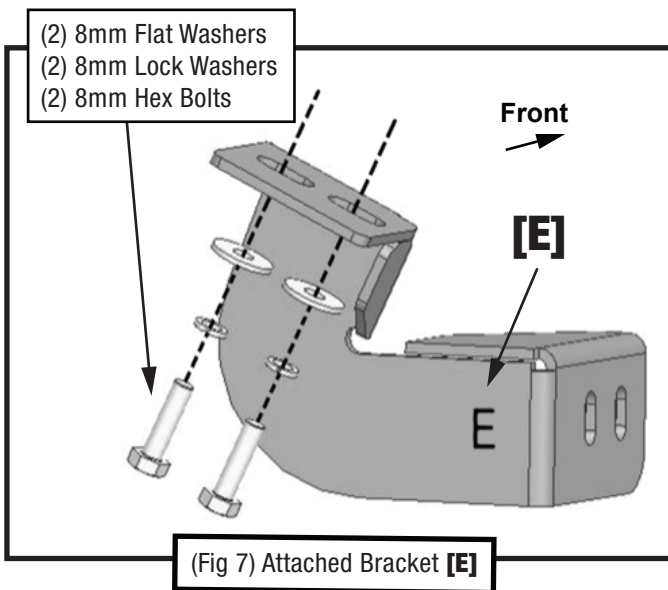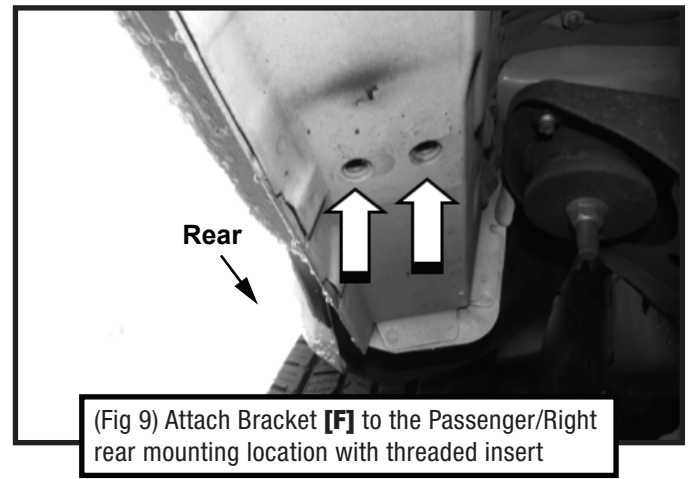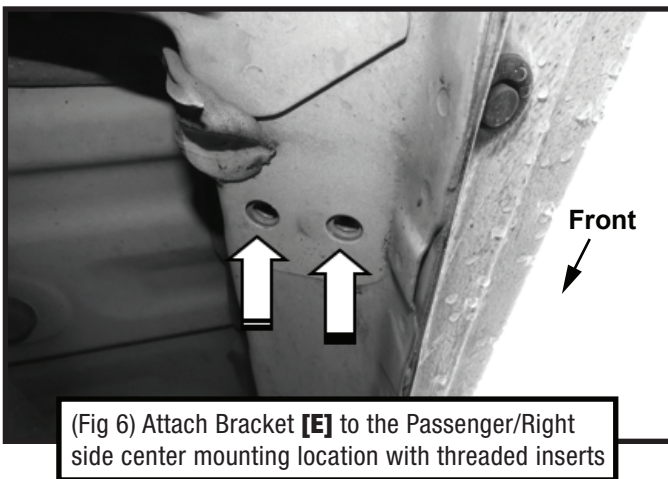

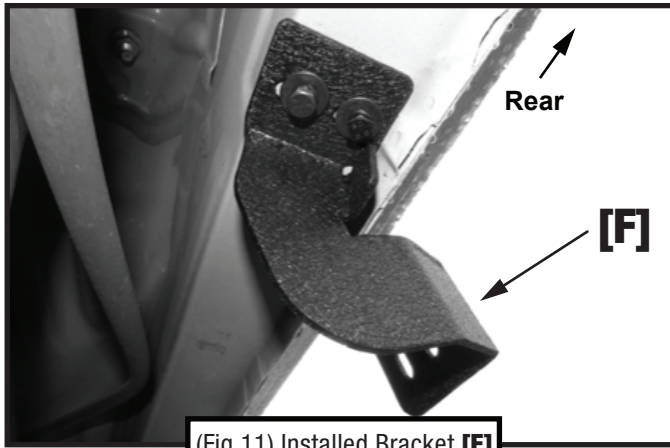

STEP 3 DRIVER SIDE


Repeat **STEPS 1-2** for driver side installation.

Use Bracket [A] instead of [D];

Use Bracket [B] instead of [E];



Use Bracket [C] instead of [F];

Use Support Bracket [G] instead of [H].

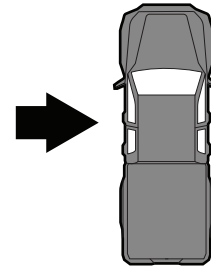

STEP 2 MOUNTING RUNNING BOARDS

Follow (Figs 12-13) to install the passenger-side running board.

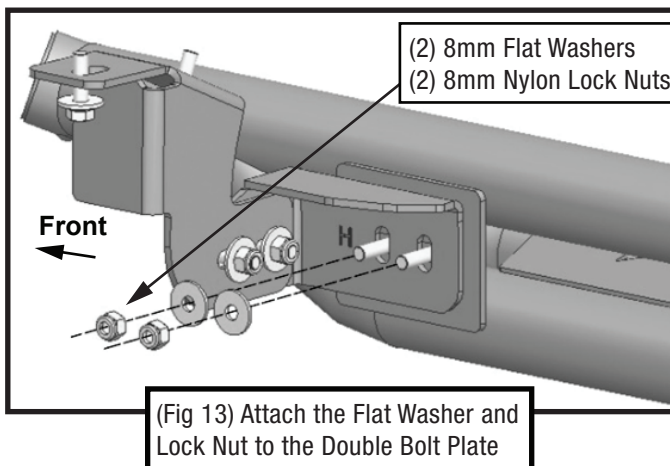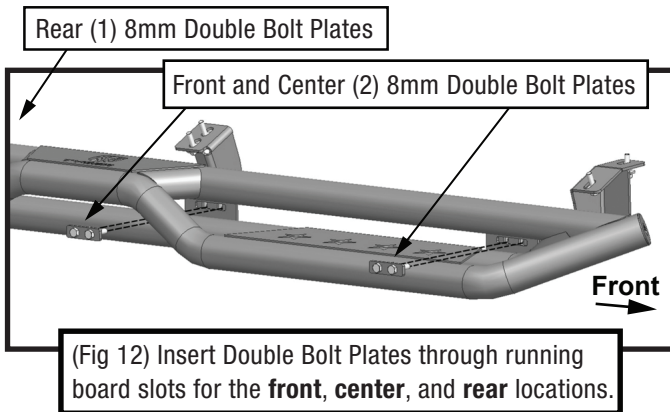

STEP 4

Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

