

TYGER TRAX

TG-TX7T29958

Scan to Download the Latest Digital Version



BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

x1 Driver/Left Tyger Trax

Passenger/Right Tyger Trax

x1 Driver/Left Front Mounting Bracket (A)

Passenger/Right Front Mounting Bracket (C)

x2 Driver/Left Center/Rear Mounting Brackets (B)

x2 Passenger/Right Center/Rear Mounting Brackets (D)

x12 8mm x 30mm Hex Bolts


8mm x 25mm Combo Bolts

8mm Lock Washers

x12 8mm x 24mm OD x 2mm Flat Washers

Parts List


Reference the letters printed on the brackets to determine mounting locations

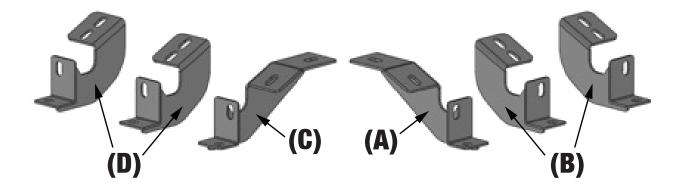



Driver/Left TYGER TRAX



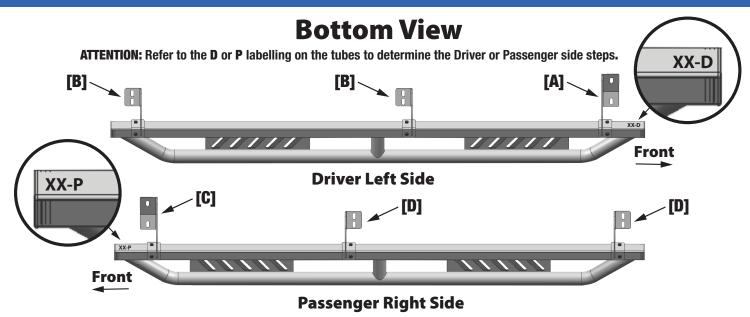


PROCEDURE:


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. USE ILLUSTRATION TO IDENTIFY BRACKETS.



Starting on the Driver/Left front of the vehicle, remove the plastic plugs, (or hex bolts), covering the threaded holes in the body panel (Fig 1). Select the Driver/Left Front Mounting Bracket (A). Attach the Bracket to the vehicle with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat Washers (Fig 2). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

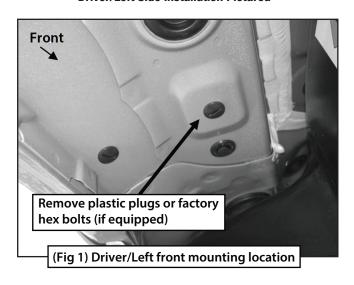

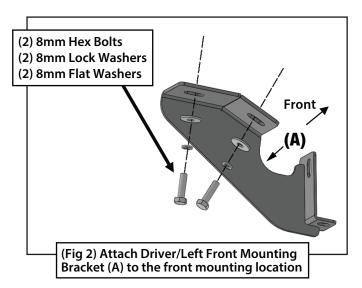


STEP 2

Move along the body panel to the center mounting location. Select (1) Driver/Left Center/Rear Mounting Bracket (B). Repeat **STEP 1** to install the Mounting Bracket (Figs 3 & 4). DO NOT tighten hardware.

Driver/Left Side Installation Pictured






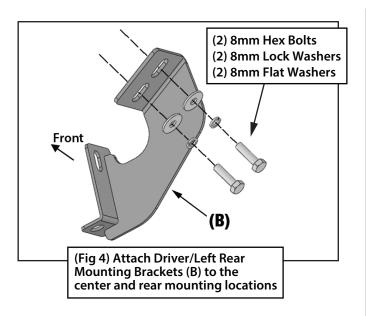

STEP 3

Continue to the last mounting location at the back of the cab, (Fig 5). Select the remaining (1) Driver/Left Center/Rear Mounting Bracket (B). Repeat **STEP 2** to attach the Bracket to the rear mounting location. DO NOT tighten hardware.


Driver/Left Side Installation Pictured

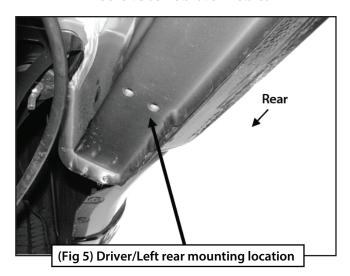

STEP 4

Carefully unwrap the Driver/Left TYGER TRAX. Place the TYGER TRAX onto the Mounting Brackets, (DO NOT slide or damage to the finish to the Side Armor may result). Attach the TYGER TRAX to the Mounting Brackets with (6) 8mm Combo Bolts (Fig 6). DO NOT tighten hardware.

Driver/Left Side Installation Pictured

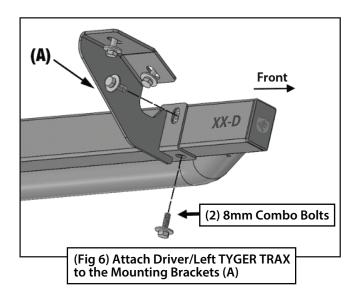

STEP 5

Level and adjust the TYGER TRAX and tighten all hardware.

STEP 6

Repeat STEPS 1-5 to attach the Passenger/Right TYGER TRAX.

STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.