



STAR ARMOR®

TG-AM2T20048

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1** Driver/Left Side Armor
- x1** Passenger/Right Side Armor
- x12** 8-1.25mm x 30mm Hex Bolts
- x12** 8mm Lock Washers
- x12** 8mm Plate Washers

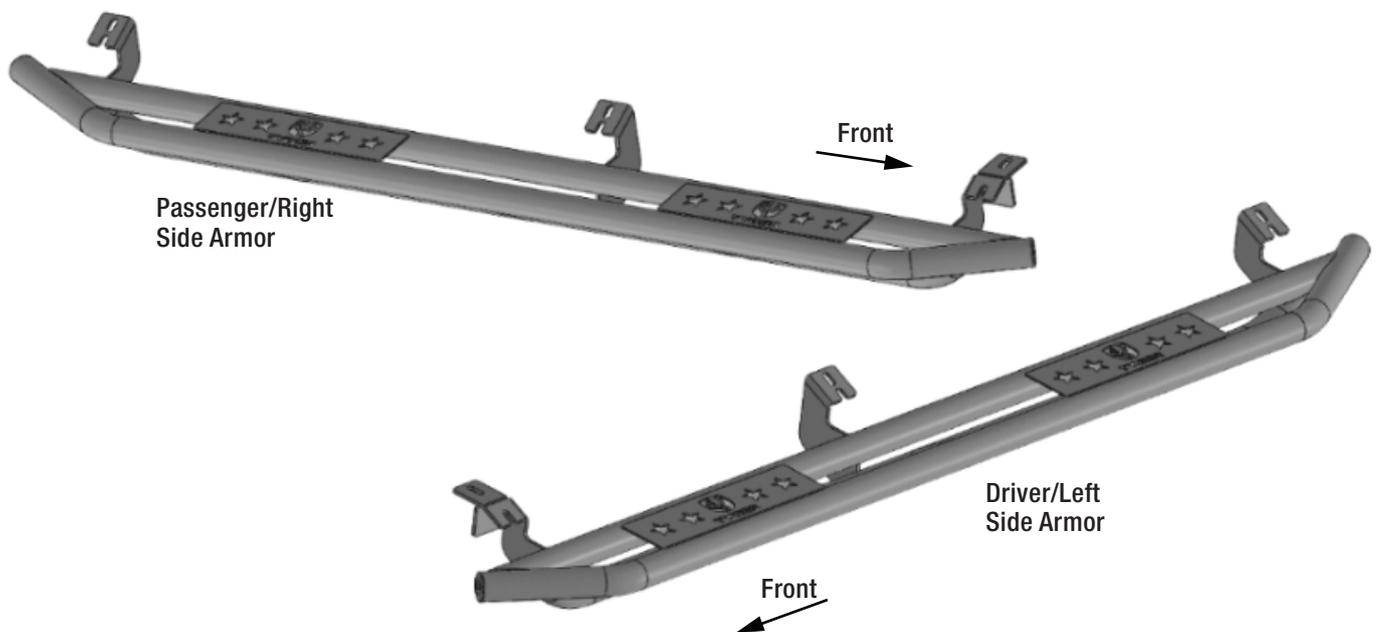



STEP 1


REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. ASSISTANCE IS HIGHLY RECOMMENDED.

STEP 2


Starting on the Driver/Left side of the vehicle, remove any plastic plugs or hex bolts from the factory mounting locations along the bottom of the floor, (Figs 1—3). **NOTE:** If necessary, hold the Passenger/Right Armor up in position to help locate correct mounting holes.

Passenger/Right Side Installation Pictured


Remove plastic plugs or factory hex bolts (if equipped)

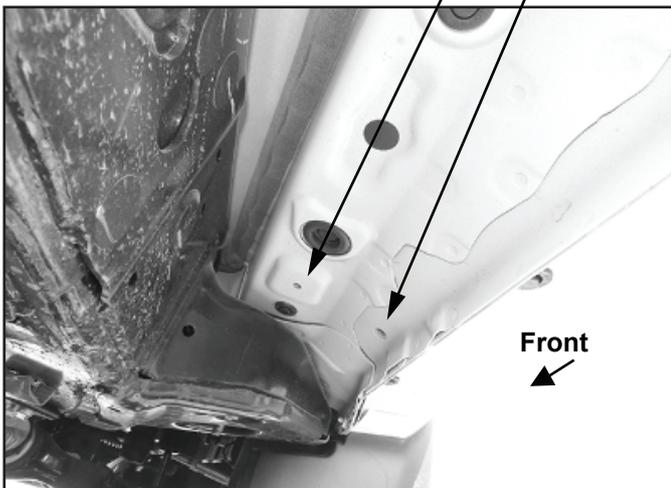

(Fig 1) Passenger/Right front mounting location

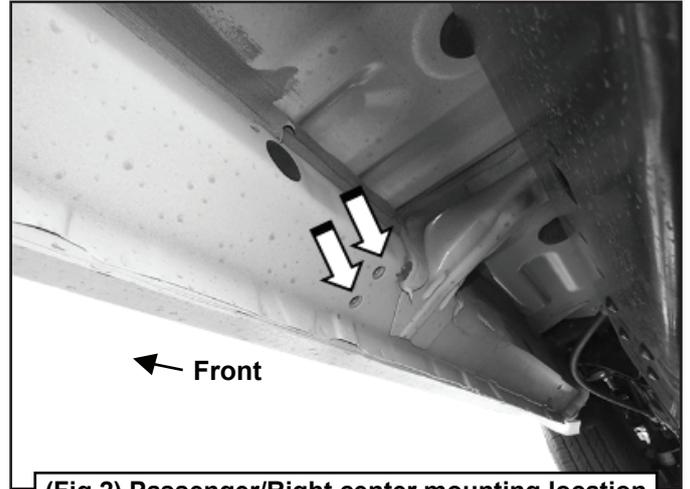

(Fig 2) Passenger/Right center mounting location

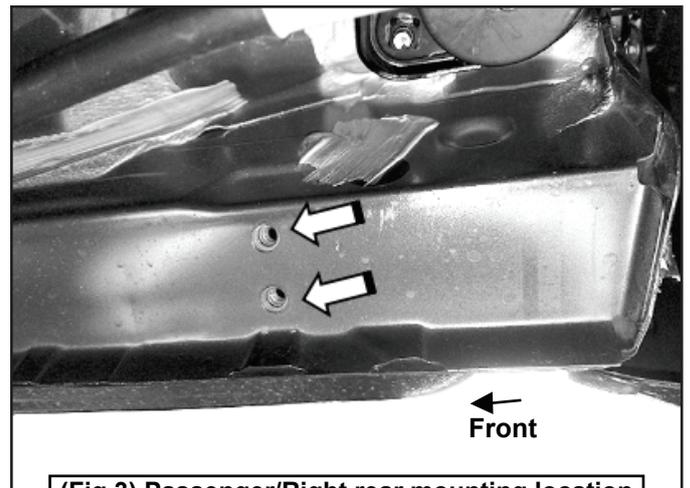

(Fig 3) Passenger/Right rear mounting location


STEP 3

With assistance, line up the (3) mounting brackets on the Armor with the factory threaded holes in the bottom of the floor panel. Attach the Armor to the floor panel with the included (6) 8mm Hex Bolts, (6) 8mm Lock Washers and (6) 8mm Plate Washers, (Figs 4—6). Leave hardware loose.




Passenger/Right Side Installation Pictured

- (2) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Plate Washers

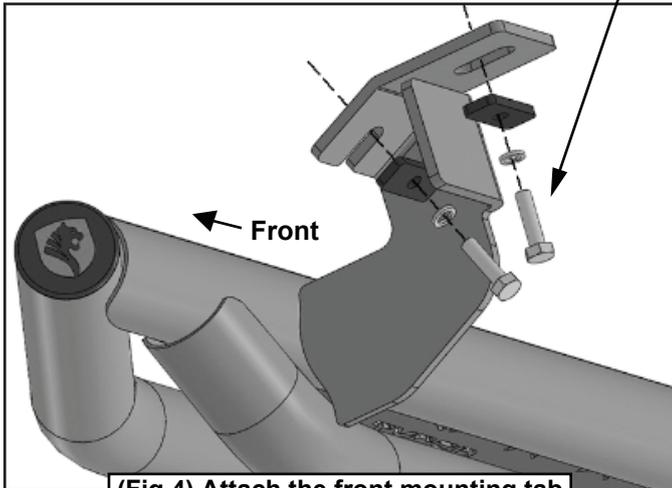


(Fig 4) Attach the front mounting tab on the Armor to the front location

- (2) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Plate Washers

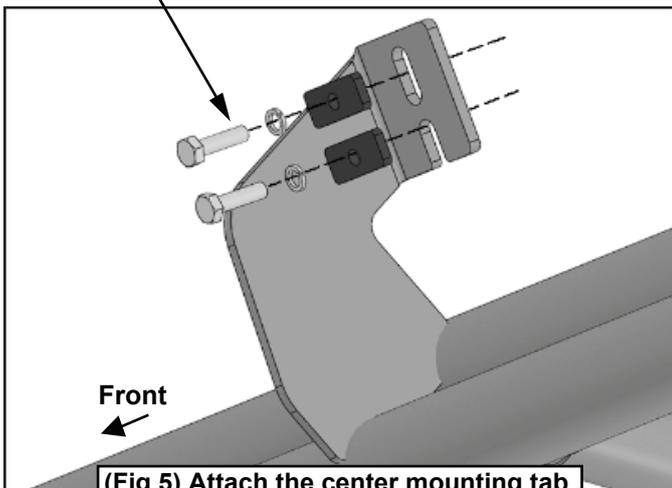

(Fig 5) Attach the center mounting tab on the Armor to the center location


- (2) 8mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm Plate Washers

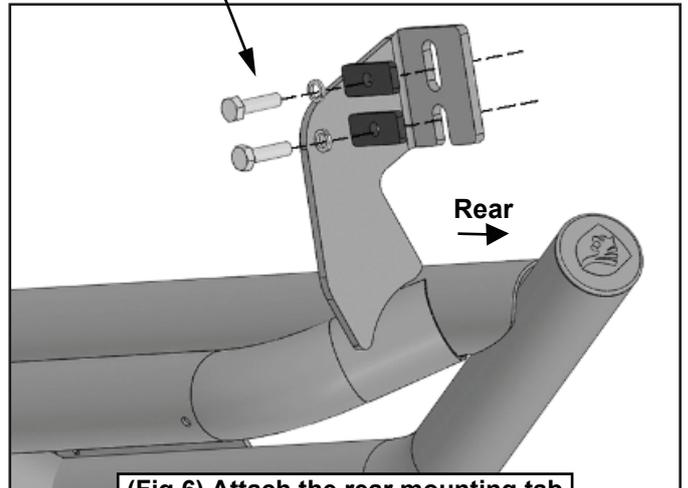

(Fig 6) Attach the rear mounting tab on the Armor to the rear location

STEP 4

Level and adjust the Armor as necessary and fully tighten all hardware.

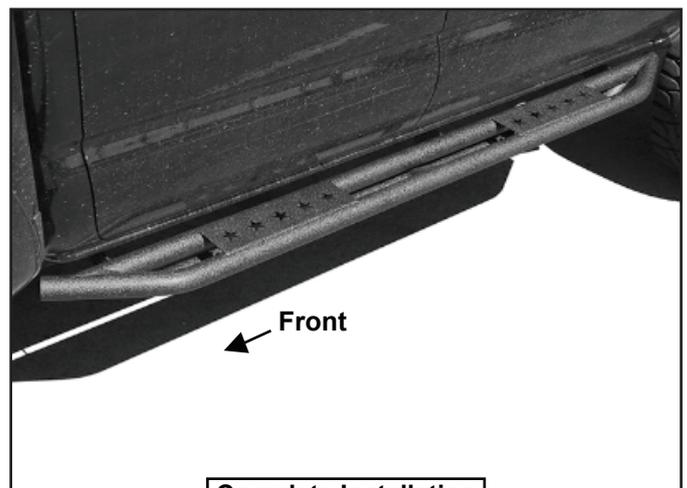

Complete Installation



TYGER[®]

STEP 5

Repeat **STEPS 2—4** to attach the Passenger/Right Armor.

CARE INSTRUCTIONS:

DO NOT use any type of polish or wax that may contain abrasives that could damage the finish. Use only mild soap to clean the Tyger Armor.