



TYGER®

TYGER GUARD™

TG-GD6D60528

BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT



TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126


Parts List

- x1 Tyger Guard
- x1 Driver/Left Frame Bracket
- x1 Passenger/Right Frame Bracket
- x8 10-1.5mm x 35mm Hex Bolts
- x4 10-1.5mm x 30mm Hex Bolts
- x8 10mm x 30mm x 2.5mm Large Flat Washers
- x8 10mm x 27mm x 3mm STD Flat Washers
- x8 10mm Lock Washers
- x4 10-1.5mm Nylon Lock Nuts
- x2 6-1.0mm x 20mm Combo Bolts
- x1 4mm Wrench

Passenger/right Frame Mounting Bracket

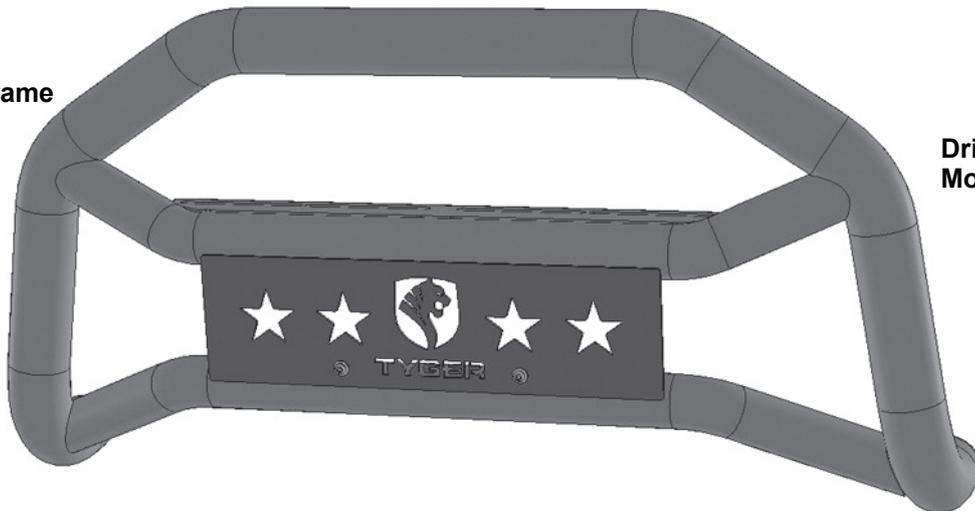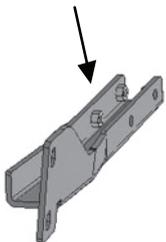

Driver/left Frame Mounting Bracket

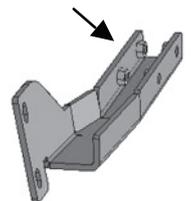



NOTE: REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED. INSTALLATION MAY INTERFERE WITH FRONT BUMPER MOUNTED SENSORS.

STEP 1


Start installation under the front bumper. Remove the (2) factory hex bolts attaching the driver/left tow hook, (Figs 1-2).

IMPORTANT: Tow hook bolts are held in place with high torque. Breaker bar or air assisted tools may be required to remove factory bolts. Once hardware has been removed, slide the tow hook out through the bumper.

NOTE: Tow hooks cannot be reinstalled.




(Fig 1) Driver/left tow hook pictured

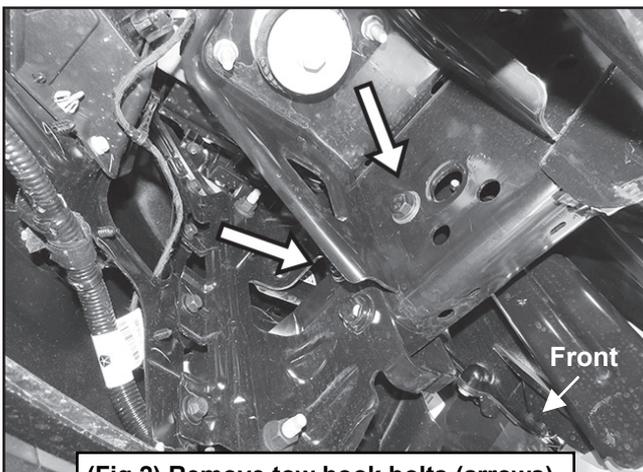

(Fig 2) Remove tow hook bolts (arrows). Driver/left side pictured

STEP 2

Select the driver/left Mounting Bracket, (Fig 3). Slide the Bracket through the opening in the front bumper. Attach the Bracket to the holes for the tow hook with the included (4) 10mm x 35mm Hex Bolts, (4) 10mm Lock Washers and (4) 10mm x 30mm Large Flat Washers, (Fig 3). **DO NOT** tighten hardware at this time.

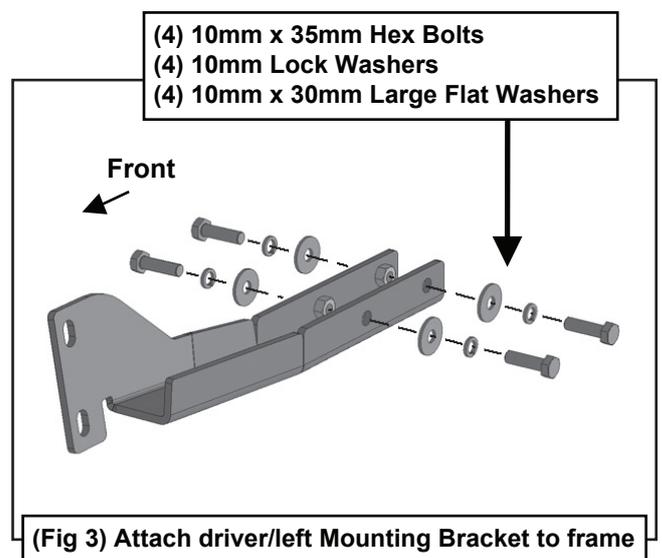

(Fig 3) Attach driver/left Mounting Bracket to frame

STEP 3




Repeat **Steps 1-2** to attach the passenger/right Mounting Bracket.

STEP 4

Carefully unwrap the Tyger Guard. With assistance, hold the Tyger Guard up to the inside of the Brackets. Attach the Tyger Guard to the Brackets with the included (4) 10mm x 30mm Hex Bolts, (8) 10mm x 27mm STD Flat Washers and (4) 10mm Nylon Lock Nuts, (Figs 4-5).




TYGER[®]

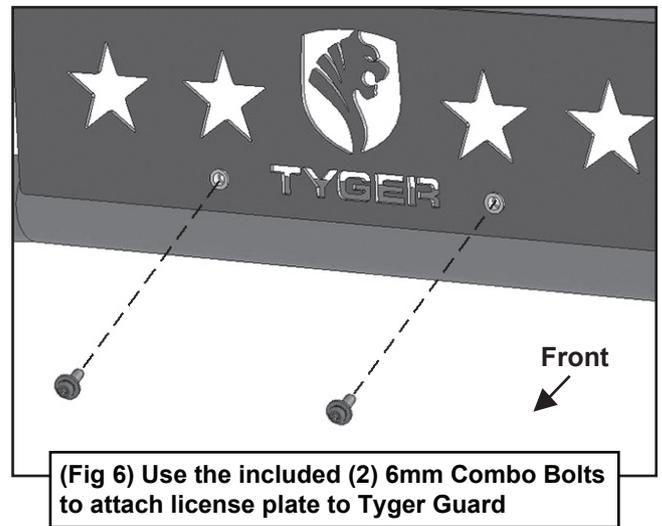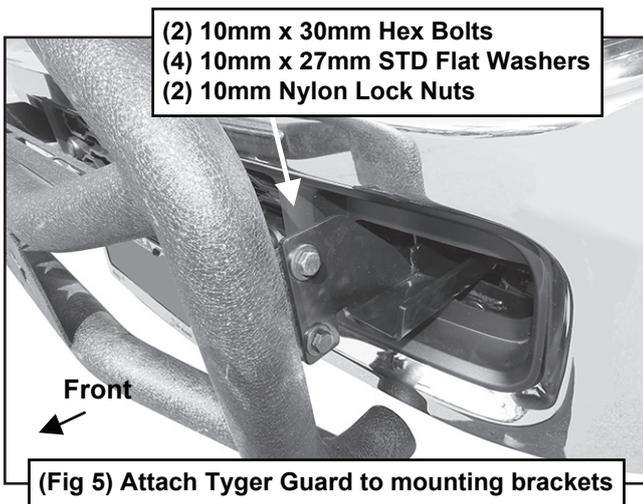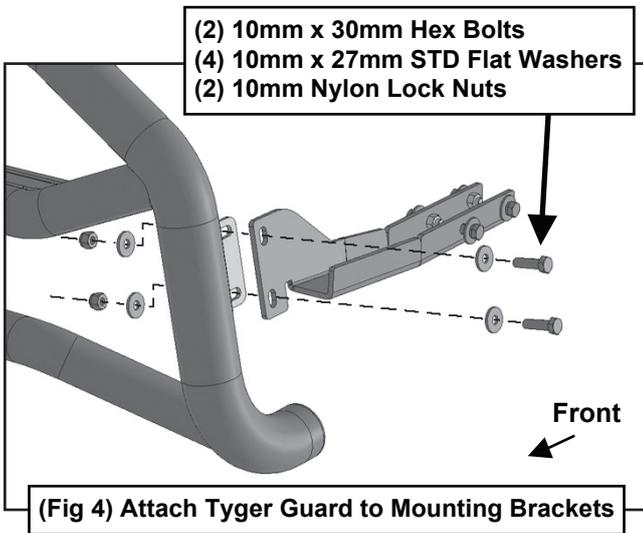

STEP 7

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

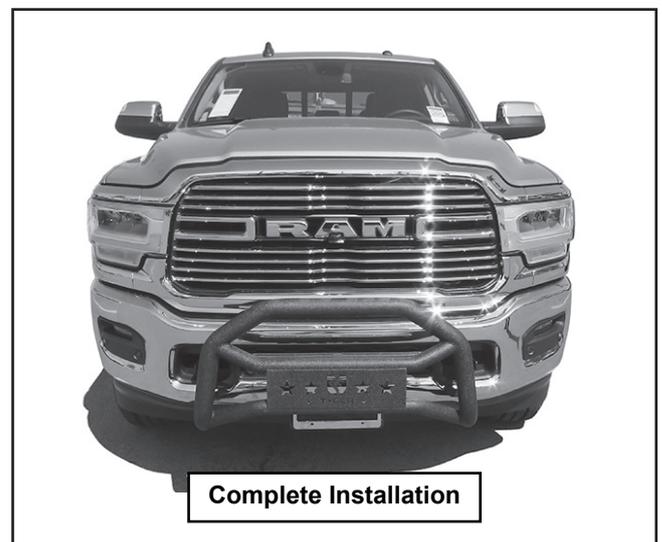

STEP 5

Stand back from the vehicle and check to see that the Tyger Guard is centered and level on the vehicle and adjust as necessary. Level and adjust the Tyger Guard and fully tighten all hardware.

STEP 6

Use the included (2) 6mm Combo Bolts to attach the license plate to the front of the Tyger Guard if needed, (Fig 6).