



## SKID PLATE

TG-SP6T80668

### BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)

### TORQUE VALUES

| Fastener Size | Class 8.8 Torque (ft-lbs) | Class 10.9 Torque (ft-lbs) |
|---------------|---------------------------|----------------------------|
| 6mm           | 6-7                       | 6-7                        |
| 8mm           | 15-16                     | 22-23                      |
| 10mm          | 31-32                     | 44-45                      |
| 12mm          | 54-55                     | 78-79                      |
| 14mm          | 87-88                     | 125-126                    |

## Parts List

- x1 Front Bumper Skid Plate
- x1 Driver/left Mounting Bracket
- x1 Passenger/right Mounting Bracket
- x1 5mm Wrench
- x4 8-1.25mm x 25mm Button Head Bolts
- x4 8mm Lock Washers
- x4 8mm x 24mm Flat Washers
- x2 6mm x 20mm Button Head Combo Bolts

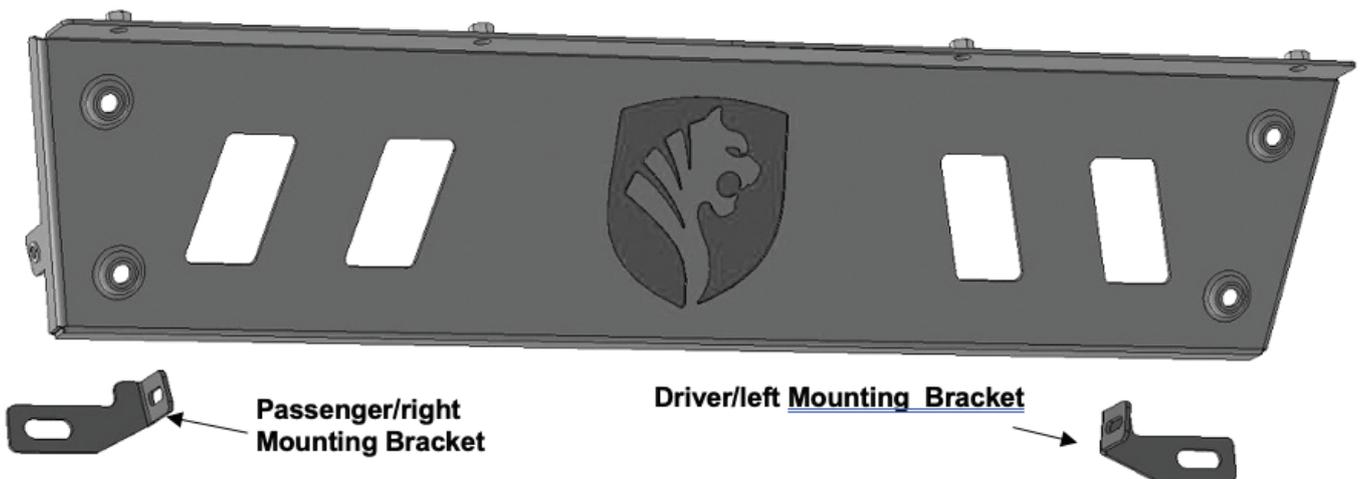




## PROCEDURE:

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

## STEP 1

Carefully unwrap the Skid Plate and Brackets. Line up the top of the Skid Plate with the back of the Tyger Fury Front Bumper. Attach the Skid Plate to the Bumper with the included (4) 8mm x 25mm Button Head Bolts, (4) 8mm Lock Washers and (4) 8mm Flat Washers (Fig 1). DO NOT fully tighten hardware at this time.


(Fig 1) Attach Skid Plate to bottom/back of Tyger Fury Front Bumper

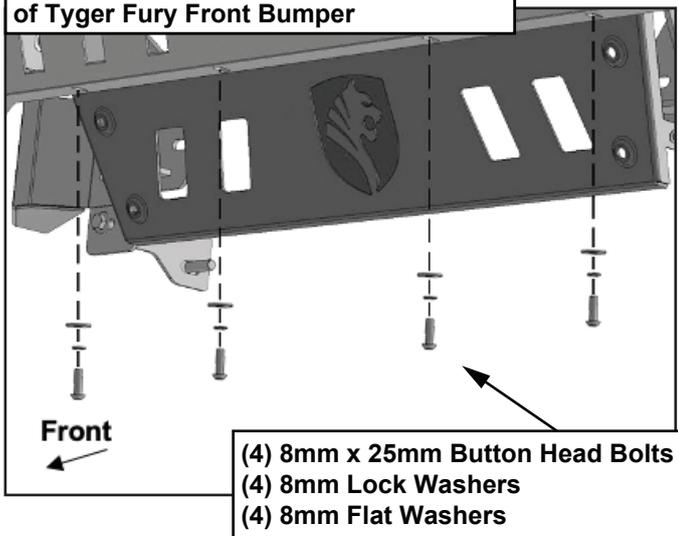

## STEP 2


Remove the 10mm hardware attaching the Frame Support Bracket to the Frame Mounting Bracket (Fig 2).

**NOTE:** Hex bolts are also accessible with splash guard in place.

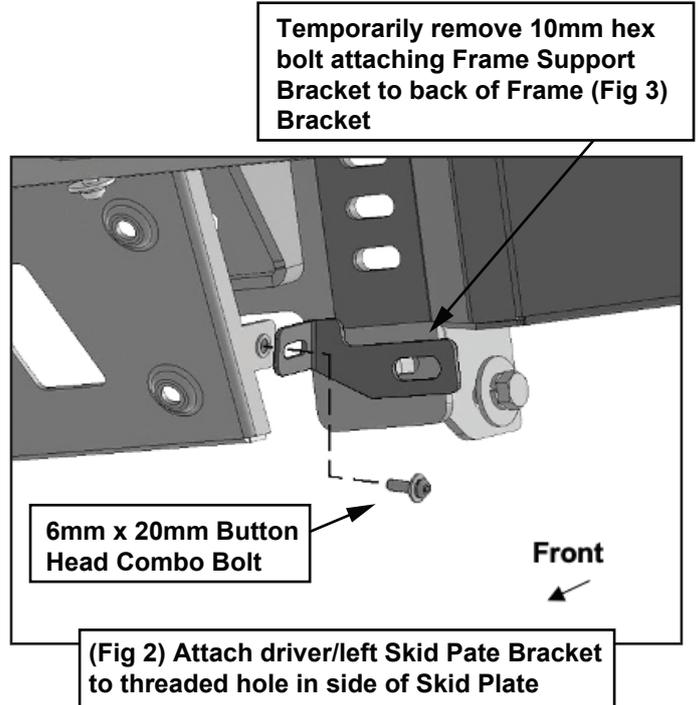

## STEP 3

Select the driver/left Lower Skid Plate Mounting Bracket (Fig 2). Attach the Skid Plate Bracket to the threaded insert in the side of the Skid Plate with the included (1) 6mm x 20mm Button Head Combo Bolt. Reuse the 10mm hardware removed in **STEP 2** to attach the Skid Plate Bracket to the front of the Frame Bracket, (Fig 3). DO NOT fully tighten at this time.

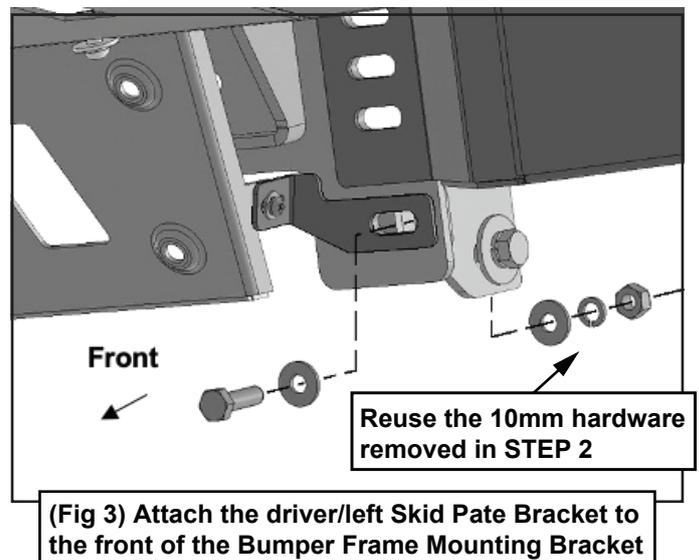




# TYGER<sup>®</sup>

## STEP 4

Repeat **STEPS 2 & 3** to attach the passenger/right side of the Skid Plate to the Brackets.

## STEP 5

Level and adjust the Skid Plate and fully tighten all hardware.

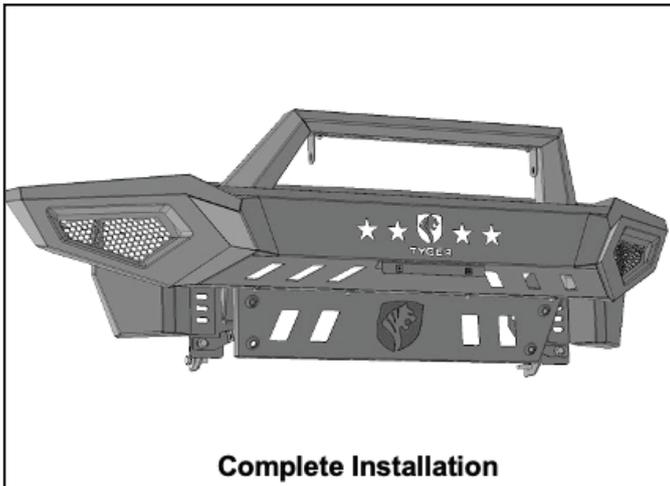

## STEP 6

Do periodic inspections to the installation to make sure that all hardware is secure and tight.