

TYGER RIDER®

TG-SS2F35138

BEFORE INSTALLATION


READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: WWW.TYGERAUTO.COM/CONTACT

TORQUE VALUES

Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- x1 Driver/Left Sidebar
- Passenger/Right Sidebar
- Front Mounting Brackets
- Center/Rear Mounting Brackets
- 10-1.5mm x 25mm Hex Bolts
- 10mm Lock Washers
- 10mm x 27mm x 3mm Flat Washers
- 8-1.25mm x 25mm Combo Bolts

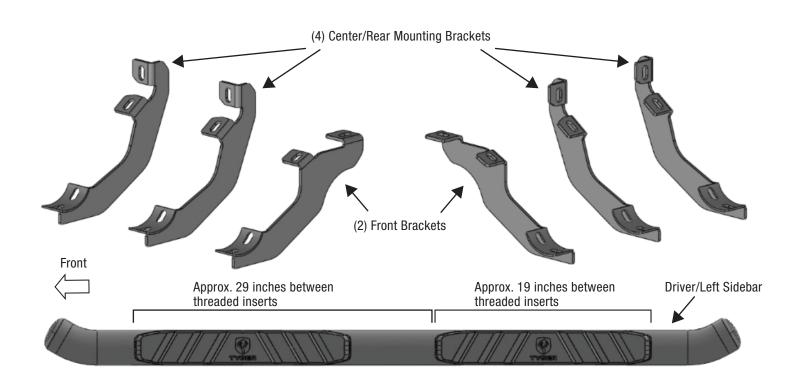




STEPI

REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.

STEP 2

Starting on the Driver/Left side inner rocker panel, locate the threaded mounting holes in the rocker panel, (Fig 1). Remove the plastic plugs covering the mounting holes.


Driver/Left Side Installation Pictured

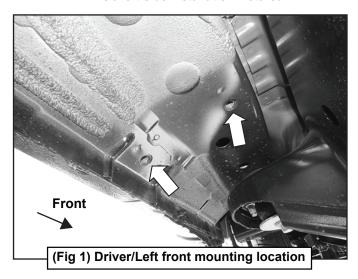


STEP 3

Select (1) Front Mounting Bracket. Attach the Bracket to the Driver/Left front location with (2) 10mm Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers (Figs 2 & 3). DO NOT tighten hardware at this time.


Driver/Left Side Installation Pictured

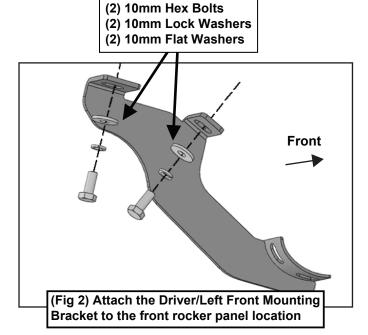

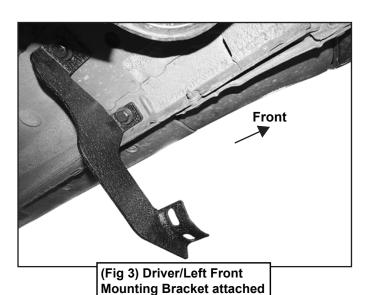


STEP 4

Locate the Center threaded mounting holes. Select (1) Center/Rear Mounting Bracket. Attach with (2) 10mm Hex Bolts, (2) 10mm Lock Washers and (2) 10mm Flat Washers, (Figs 4—6). DO NOT tighten hardware at this time.

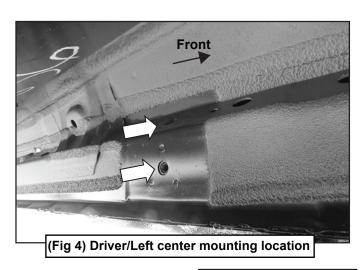




- (2) 10mm Lock Washers
- (2) 10mm Flat Washers

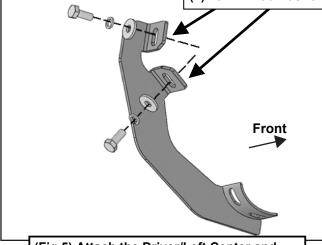


(Fig 5) Attach the Driver/Left Center and Rear mounting Brackets to the rocker panel

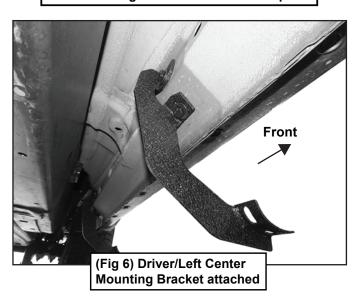

STEP 5

Repeat **STEP 3** to attach (1) Center/Rear Mounting Bracket to the rear location, (Figs 5, 7 & 8).

Driver/Left Side Installation Pictured

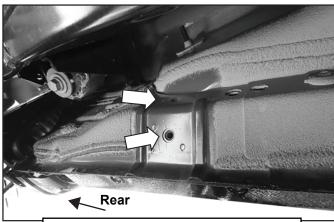

(Fig 7) Driver/Left rear mounting location




STEP 6


Unwrap the Driver/Left Sidebar. Carefully place Sidebar on the brackets.

IMPORTANT: DO NOT slide or rotate Sidebar on cradles, or damage to the finish may result. Attach Sidebar to the Mounting Brackets with (6) 8mm Combo Bolts. DO NOT tighten hardware at this time, (Figs 9—12).

Customer Support: www.TygerAuto.com/Contact

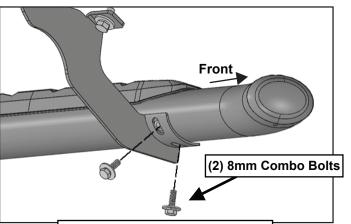

(Fig 9) Attach the Driver/Left Sidebar to the Mounting Brackets

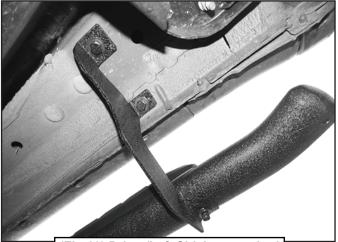

(Fig 10) Driver/Left Sidebar attached to the Front Mounting Bracket



(Fig 11) Driver/Left Sidebar attached to the Center Mounting Bracket



STEP 7

Level and adjust the Sidebar and fully tighten all hardware

STEP 8

Repeat STEPS 2—7 to attach the Passenger/Right Sidebar.

STEP 9

Do periodic inspections to the installation to make sure that all hardware is secure and tight