



# TYGER®

## TYGER TRAX

TG-TX7T29678

Scan to Download the  
Latest Digital Version



### BEFORE INSTALLATION

READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE FOUND, PLEASE TAKE A PICTURE FOR THE CLAIM PURPOSE. TO FILE YOUR CLAIM, PLEASE VISIT: [WWW.TYGERAUTO.COM/CONTACT](http://WWW.TYGERAUTO.COM/CONTACT)

### TORQUE VALUES


Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

- x1** Driver/Left Tyger Trax
- x1** Passenger/Right Tyger Trax
- x1** Driver/Left Front Mounting Bracket [A]
- x1** Passenger/Right Front Mounting Bracket [C]
- x2** Driver/Left Center/Rear Mounting Brackets [B]
- x2** Passenger/Right Center/Rear Brackets [D]
- x12** 8mm x 1.25mm x 25mm Hex Combo Bolts
- x12** 8mm Lock Washers
- x12** 8mm x 1.25mm x 30mm Hex Bolts
- x12** 8mm x 24mm x 2mm Flat Washers


### Parts List

### Top View


**ATTENTION:** Refer to **D** and **P** labelling on the side of the tubes to determine Driver and Passenger TYGER Trax

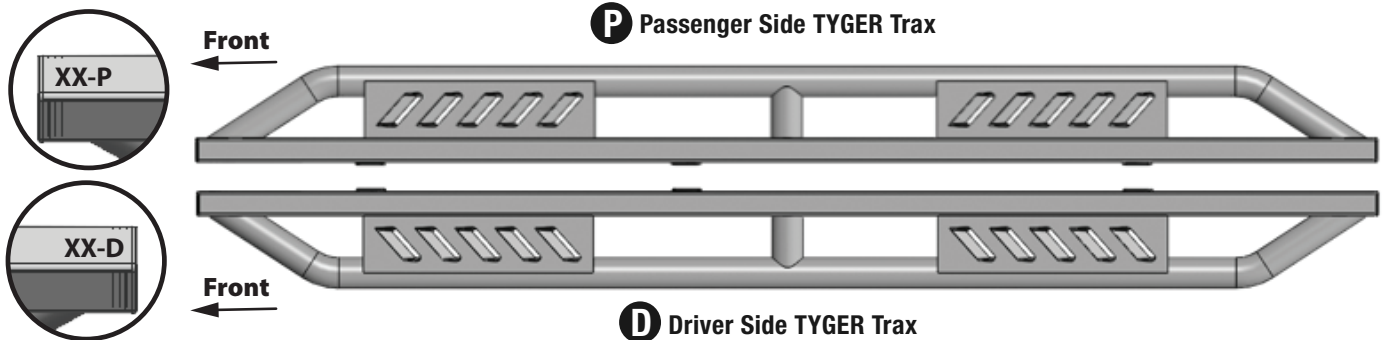


Reference the letters printed on the brackets to determine mounting locations

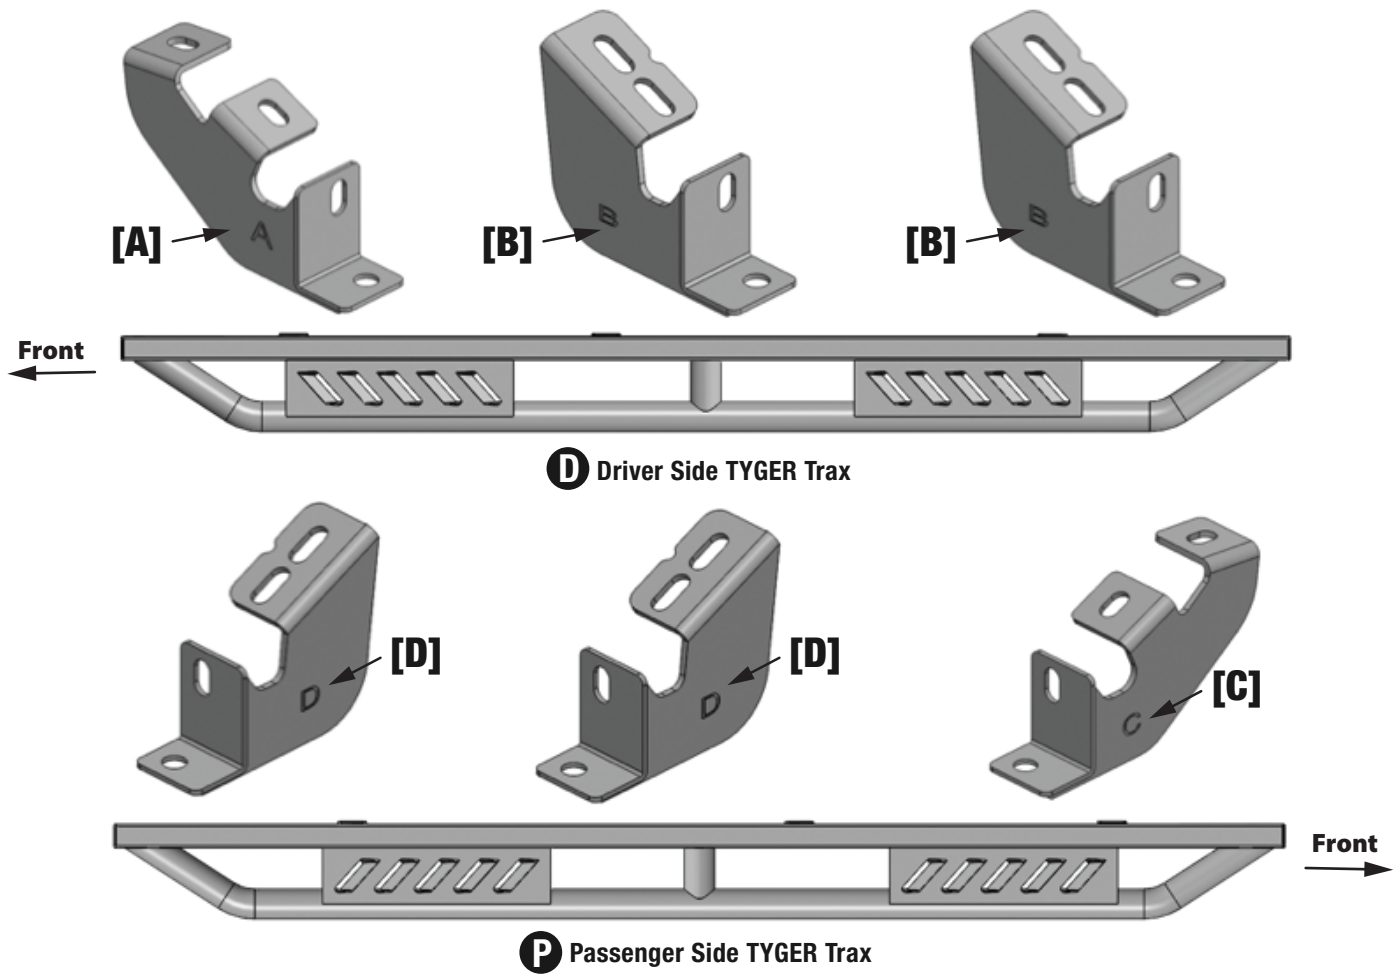


## Bottom View

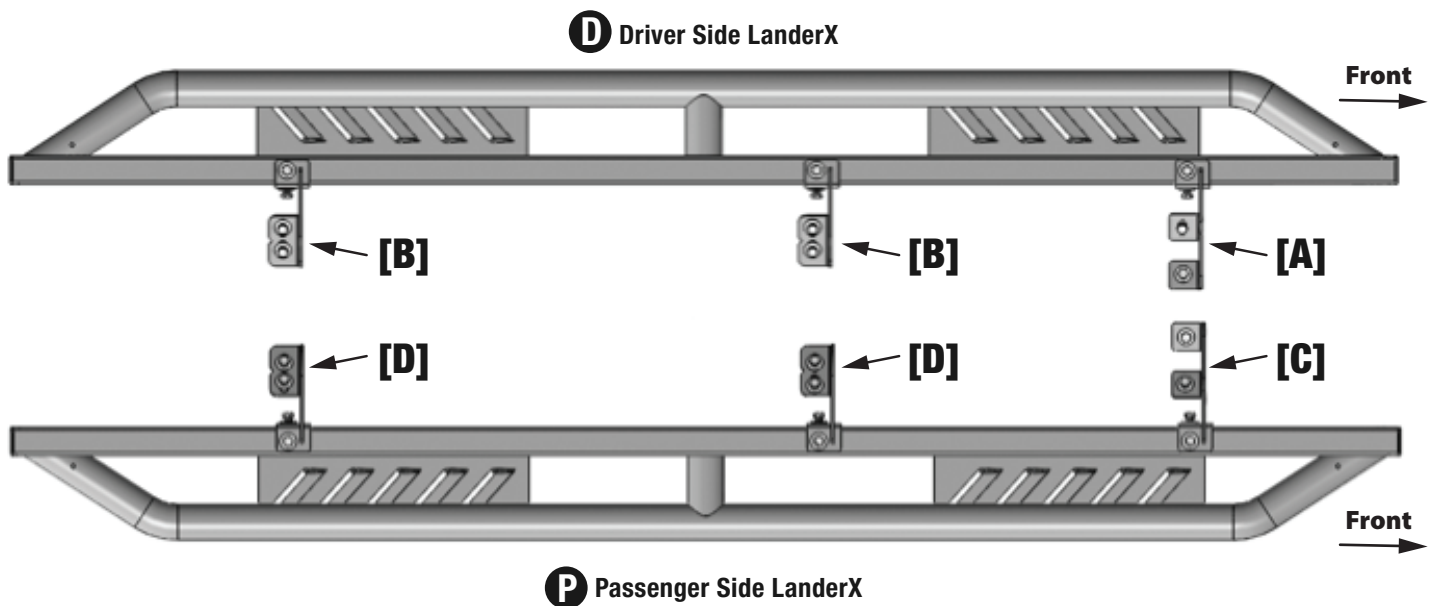

## TOOLS REQUIRED

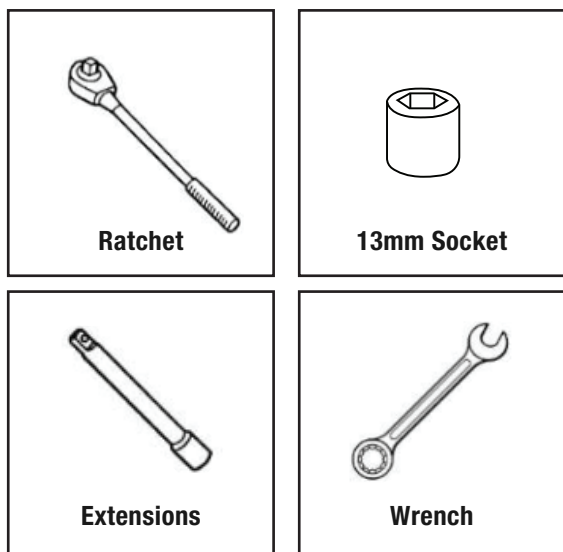



- (2) 8mm x 1.25mm x 30mm Hex Bolts
- (2) 8mm Lock Washers
- (2) 8mm x 24mm x 2mm Flat Washers

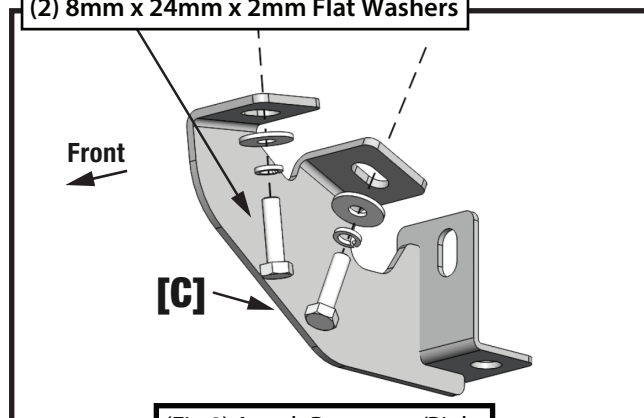

(Fig 2) Attach Passenger/Right Front Mounting Bracket [C]

## STEP 1 MOUNTING BRACKETS


Follow (Fig 1 – 9) to attach the brackets to the Passenger/Right Side. Ensure all hardware is hand tightened at this point.

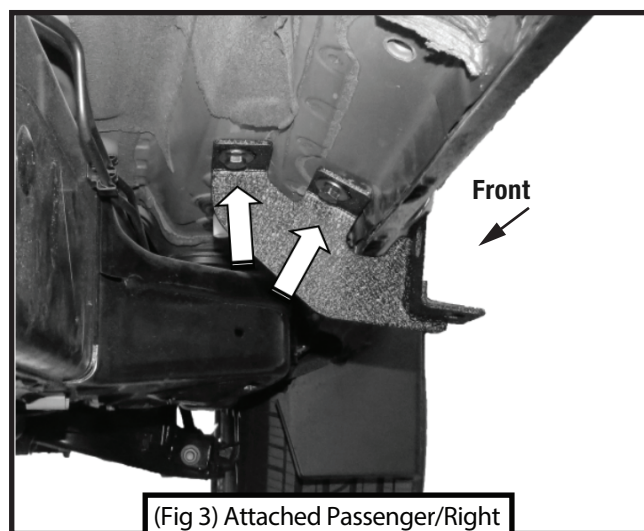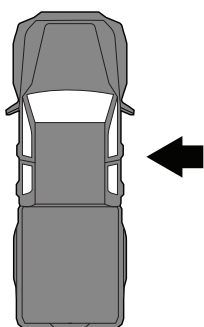

(Fig 3) Attached Passenger/Right Front Mounting Bracket [C]




Passenger-side Front Mounting Area

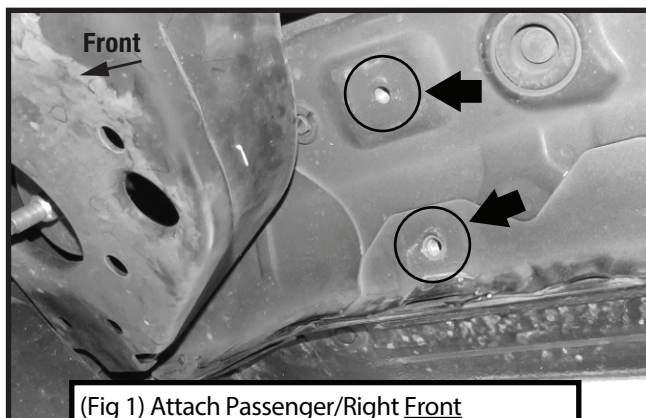



(Fig 1) Attach Passenger/Right Front Mounting Bracket [C] to front threaded inserts






Passenger-side Center Mounting Area

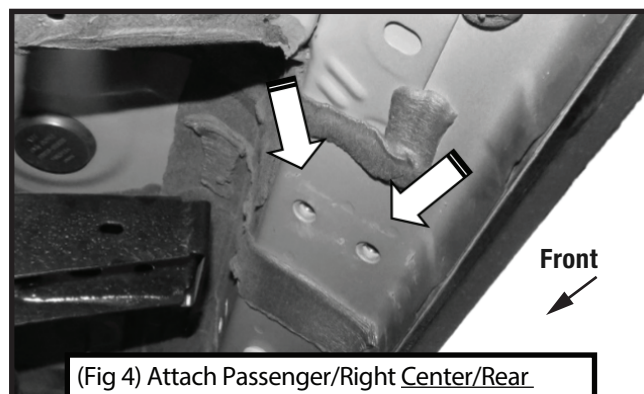

(Fig 4) Attach Passenger/Right Center/Rear Mounting Bracket [D] to center threaded inserts

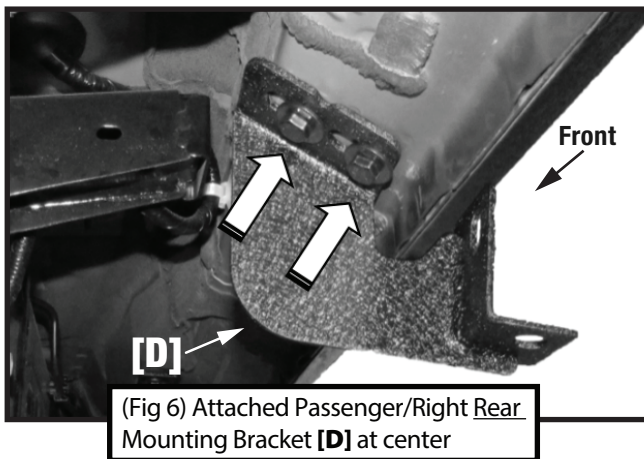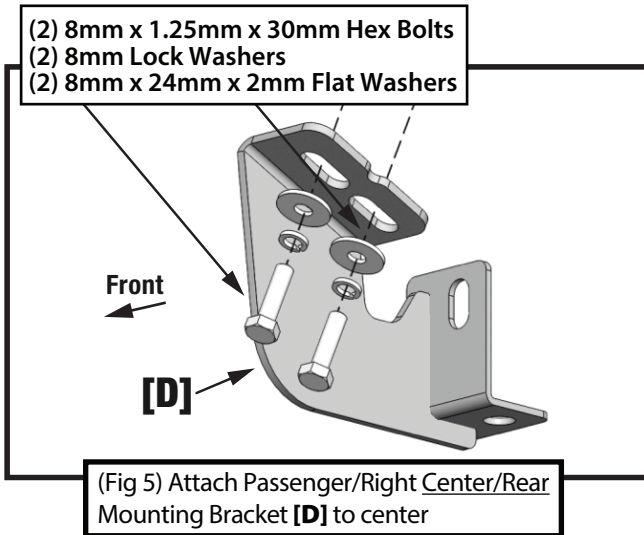


### Passenger-side Rear Mounting Area

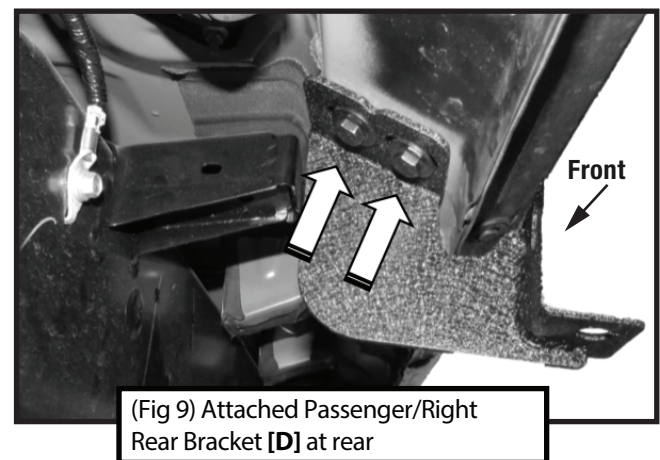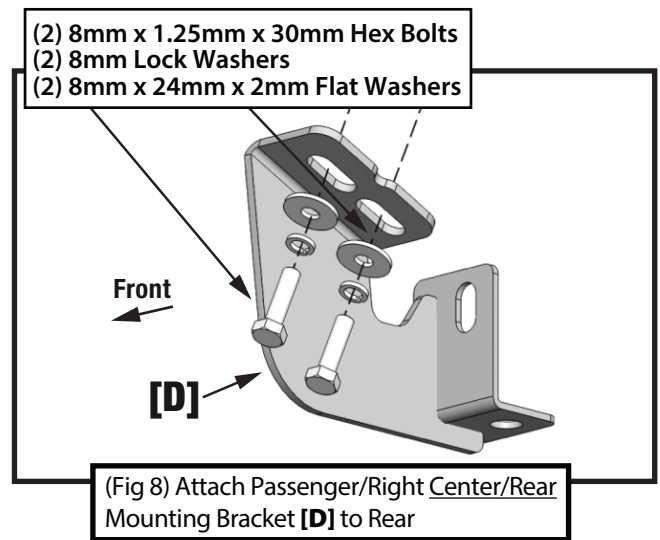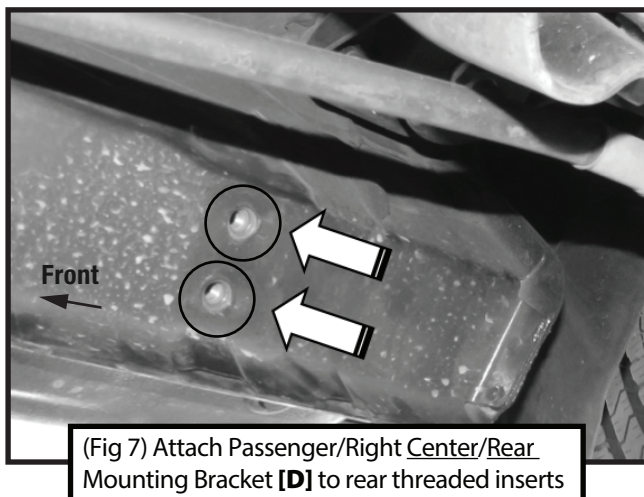


## STEP 2 MOUNTING RUNNING BOARD

Follow (Fig 10 – 11) to install the TYGER Trax on the Passenger/Right. Ensure all hardware is hand tightened at this point.

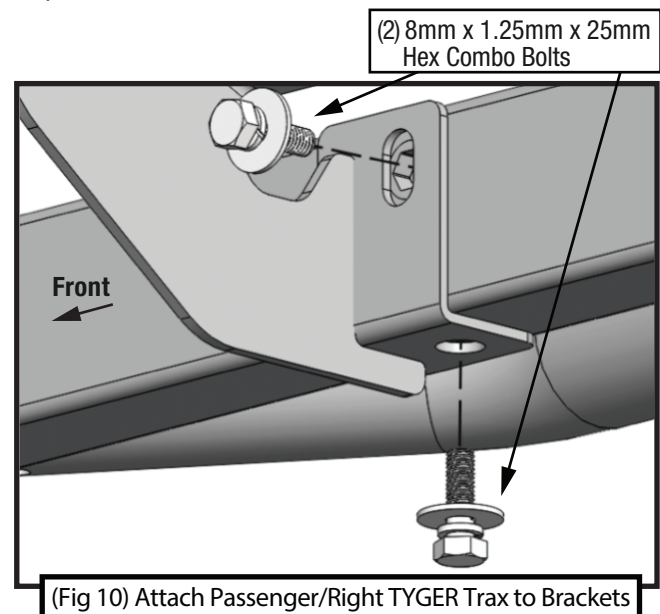




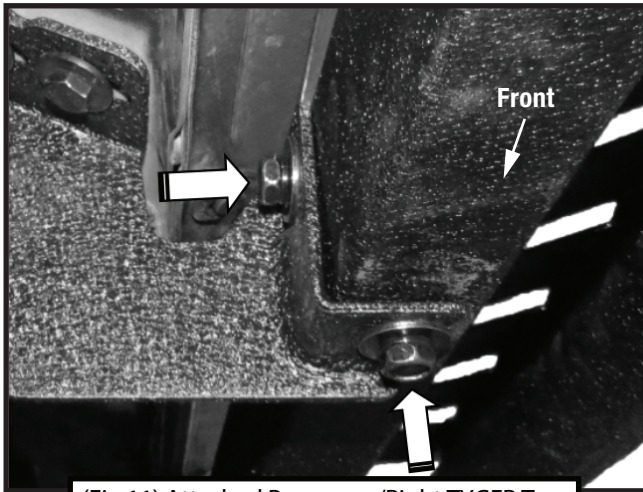

(Fig 11) Attached Passenger/Right TYGER Trax


### STEP 3 DRIVER SIDE

Repeat **STEPS 1-2** for driver side installation.  
 Use Front Mounting Bracket **[A]** instead of **[C]**;  
 Use Center Mounting Bracket **[B]** instead of **[D]**;  
 Use Rear Mounting Bracket **[B]** instead of **[D]**.

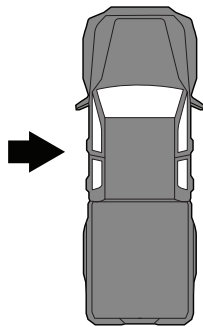

### STEP 4

Ensure TYGER Trax is level and straightened, then tighten all fasteners. Installation is complete. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

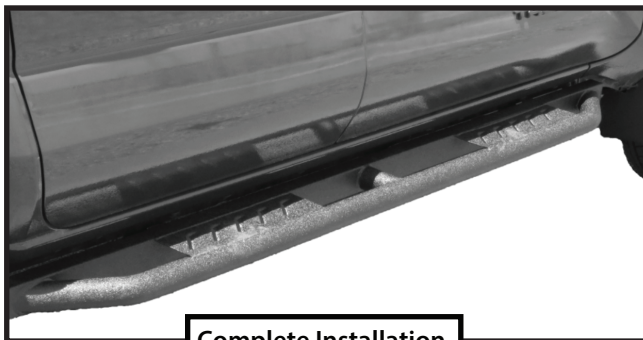

Complete Installation