



# INSTALLATION INSTRUCTIONS

Rear Cargo Drawer – Part #058 and #063

Please read and fill out the enclosed warranty registration card to activate your warranty.

## Shipping Package

- (4) 7/16 x 1 ¼ Bolts
- (4) 7/16 Nylock Nuts
- (4) 7/16 Washers
- (2) 8MM Metric Bolts
- (2) 5/16 Washers
- (2) ¼" Serrated flange nuts
- (4) ½" Hole Plugs
- (1) Drawer Handle


## ***NOTICE!*** DRAWER WILL HAVE TO BE REMOVED FOR INSTALATION INSTRUCTIONS FOR REMOVING DRAWER

Before attempting to install your new Tuffy Drawer, it is necessary to remove the drawer from the body. To do this, pull the drawer out as far as it can go then locate the small black plastic stops visible on the ball bearing drawer slides. One of the black stops will need to be deactivated by pressing down and the other one pulled up. Be careful not to break plastic stops. While deactivating the stops pull the drawer out and the slides will separate. When you are finished installing your drawer, line up the slides and push the drawer back in.

**WARNING:** If you are bolting your drawer through the side holes, be sure not to overtighten the bolts which can cause the top of the enclosure to "flex" downward. It may be necessary to install a spacer between the side of the drawer and the vehicle sidewall to prevent this bowing.

## Mounting Directions

- Insert the studs on the drawer handle into the corresponding holes in the drawer. Secure handle with the ¼" nuts.
- If you are not going to use the side mounting holes, use the hole plugs provided.
- If you have any Rear Cargo Drawer accessories (Divider or Riser Kits), refer to their individual instructions for installation
- If you do not have any Rear Cargo Drawer accessories and would like to get some, call your nearest Tuffy Security Products dealer or call Tuffy direct. The divider kit allows you to neatly compartmentalize while the riser kit allows you to store items such as the soft doors under the drawer.

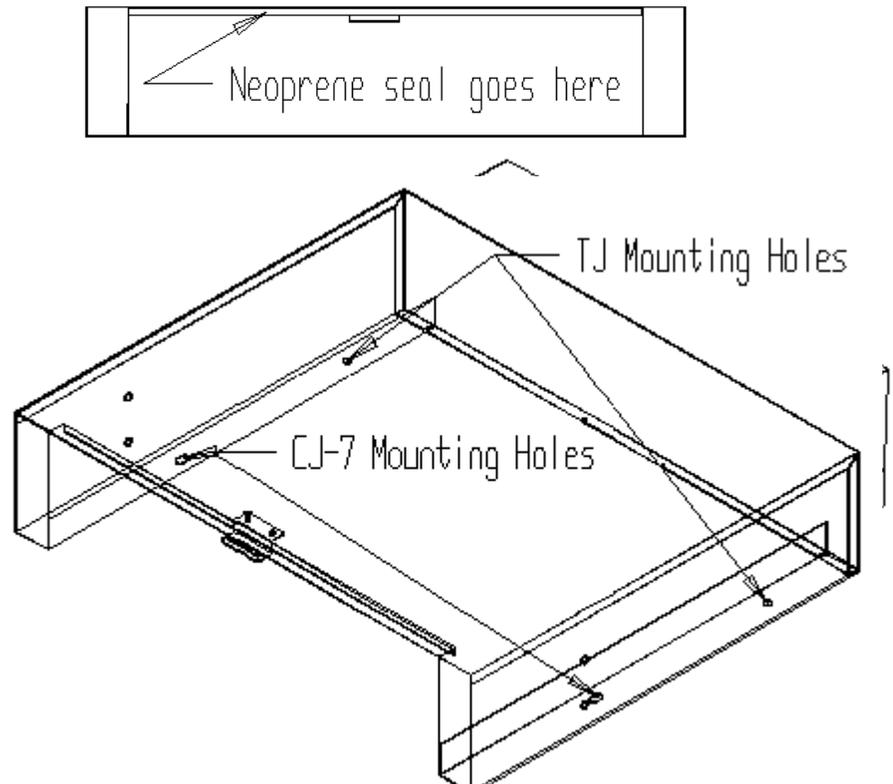

## CJ-7 MOUNTING INSTRUCTIONS

1. Take out rear seat by removing seat-mounting bolts on the two front seat brackets and along the back seat mounting bracket.
2. Place cargo box in Jeep bed.
3. Using the (2) 7/16 x 1 ¼ bolts and washers secure the cargo box down through mounting holes indicated in the drawing

### **WARNING!**

**Make sure that there is nothing under the vehicle that will be damaged by the drill bit when drilling.**

**Before drilling any holes make sure the drawer placement allows the tailgate to close!**

4. For additional stability, mark (2) holes on the floor corresponding with the TJ mounting holes. Remove cargo box. Drill (2) ½" holes and secure with (2) 7/16 x 1 1/4 bolts, (2) nuts, and (4) washers.
5. Extend the drawer slides out and while lining up the slides on the outer body and the slides on the drawer, insert the drawer.

## WRANGLER YJ MOUNTING INSTRUCTIONS

1. Take out rear seat by removing seat-mounting bolts on the two front seat brackets.
2. Remove all of the seat belt hardware including hardware on the side-walls for the seat belt harnesses if applicable.
3. Remove both catches for the fold and tumble seats on the side-walls
4. Place cargo box in the Jeep bed

### **WARNING!**

**Make sure that there is nothing under the vehicle that will be damaged by the drill bit when drilling.**

**Before drilling any holes make sure the drawer placement allows the tailgate to close!**

5. Mark any (4) of the holes. Remove the box and drill (4) ½" holes in the marked locations. Secure the cargo box down using (4) 7/16 x 1 ¼ bolts, (4) 7/16 nuts, (4) washers.
6. Extend the drawer slides out and while lining up the slides on the outer body and the slides on the drawer, insert the drawer.

## WRANGLER TJ MOUNTING INSTRUCTIONS

1. Take out rear seat by removing seat-mounting bolts on the two front seat brackets.
2. Remove all seat belt hardware including the hardware on the side-walls for the seat belt harnesses.
3. Remove both catches for the fold and tumble seats on the side-walls
4. Place cargo box in the Jeep bed
5. Using the (2) 8mm metric bolts and 5/16 washers secure the cargo box down through mounting holes on the floor as indicated in the figure above.
6. Using the hardware you removed, bolt the box through the side holes into the side-walls of the Jeep.
7. Extend the drawer slides out and while lining up the slides on the outer body and the slides on the drawer, insert the drawer.

## GENERAL MOUNTING INSTRUCTIONS

1. Place cargo box in the bed.
2. Mark any (4) holes for drilling using the box mounting holes as a template. (Select the holes that will not interfere with anything under the vehicle and will be easy to access with the wrenches.)

### **WARNING!**

**Make sure that there is nothing under the vehicle that will be damaged by the drill bit when drilling.**

**Before drilling any holes make sure the drawer placement allows the tailgate to close!**

3. Remove cargo box and drill out the (4) marked holes with a ½" drill bit.
4. Secure the cargo box down using (4) 7/16 x 1 ¼ bolts, (4) 7/16 nuts, (4) washers.
5. Extend the drawer slides out and while lining up the slides on the outer body and the slides on the drawer, insert the drawer.

**Lock it up!**

# **ATTENTION:**

## ***FREQUENT LUBRICATION IS NECESSARY ON THE LOCKING SYSTEM***

The pushbutton lock contains an “O” ring seal to protect the interior from dust and water. If this mechanism is not lubricated regularly it will become difficult to operate and it may not return to its home position preventing the key from operating the lock. If this happens simply pull up on the pushbutton to manually bring it back to its home position. Lubricate the pushbutton with a light lubricant such as silicone spray. The pushbutton may have to be periodically disassembled and cleaned.

Call (970) 564-1762 for Technical Support