


# INSTALLATION INSTRUCTIONS

## #310 Alternate Mounting Kit

### PARTS CHECKLIST

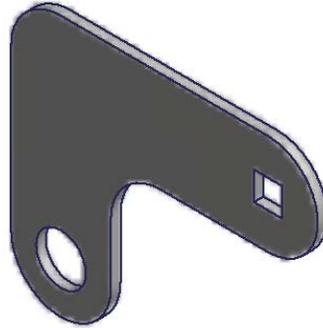

#11 (2) 310 MOUNT  
BRACKET



#10.4.2 (2) 5/16" WING KNOB NUTS



#10.4.1 (2) 5/16" x 3/4" CARRIAGE BOLTS



#10.4.3 (2) 3/8" WASHERS

#### Tools needed for standard installation

- 18mm Socket and Ratchet

**PLEASE READ ALL INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION. THESE INSTRUCTIONS ARE DESIGNED TO BE USED IN CONJUNCTION WITH THE INSTALLATION INSTRUCTIONS FOR PART# 310.**

**Note: These instructions replace Step #3 & #5 in the #310 Installation Instructions.**

1. Loosely assemble the #1 Front Panel, and the (2) #11 Mount Brackets using the hardware supplied as shown in **Figure 1(SEE PAGE 2)**. The round holes in the #11 Mount Brackets should be forward and outboard of the square holes, and should be installed in the outer slotted hole of the #1 Front Panel.
2. Use the 18mm Socket to remove the (2) OEM outer seat mount nuts (securing the seat mount to the floor).
3. Place the #1 Front Panel into the vehicle as shown in Figure 1 with the round holes over the seat mount studs, and loosely reinstall the (2) OEM seat mount nuts.  
**NOTE: This will capture the head of the Carriage bolt between the floor and the #11 Bracket making future removal/installation easier.**
4. Continue installation according to the #310 Installation Instructions returning when complete to tighten the (2) #10.4.2 Wing Knob Nuts, and the (2) OEM outer seat mount nuts.

# Figure 1

