


# AD7042

2020-UP CHEVROLET CORVETTE C8,  
VALVE SIMULATORS - PAIR

# MBRP®

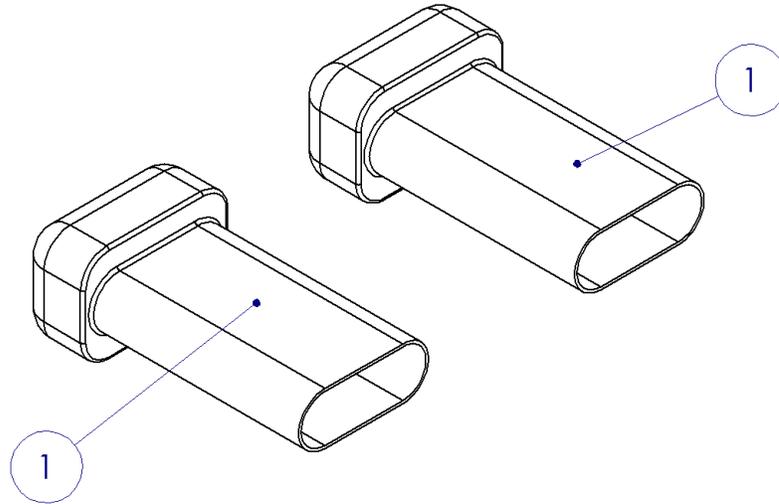

ITEM	DESCRIPTION	QTY
1	VALVE SIMULATOR	2

Refer to this LOT NUMBER when contacting customer service: \_\_\_\_\_

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

# MBRP

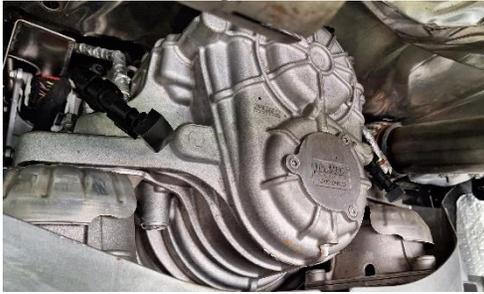


**Figure 1**

**Note: 2 pairs of Valve Simulators are required to eliminate both NPP AND AFM actuators.**

**1. Install the Valve Simulators by plugging them into the wiring harness where the AFM and/or NPP valves were connected. Secure them making sure the simulators and wiring cannot contact any exhaust components.**

**Refer to Figures 1, 2, and 3.**



**Figure 2**



**Figure 3**