


# AT-6412SP

SPORT MUFFLER - SLIP-ON  
2007-UP YAMAHA YFM GRIZZLY 700 FI  
2016-UP YAMAHA KODIAK 700  
2009-2014 YAMAHA YFM GRIZZLY 550 FI

# MBRP®

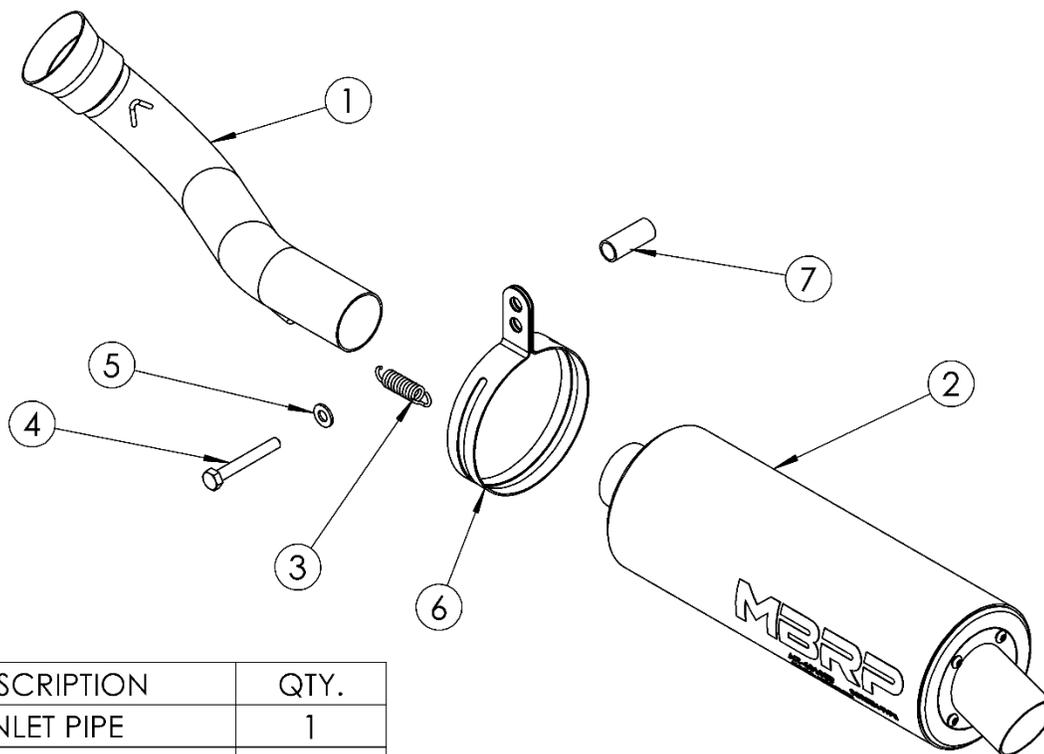

ITEM	DESCRIPTION	QTY.
1	INLET PIPE	1
2	MUFFLER	1
3	EXTENSION SPRING	1
4	HEX BOLT M8 X 60	1
5	M8 WASHER	1
6	4.5" CLAMP	1
7	SPACER	1

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.



### Removal of Stock Exhaust

1. Pull the two exhaust springs off the stock exhaust, set aside the original springs to use later.
2. Remove the flange bolt and washer that are securing the muffler to the vehicle, then remove the muffler.

### Installation of MBRP Exhaust

1. Assemble the **Inlet Pipe** into the **Muffler** with the spring tabs lined up on both.
2. Install the supplied **Extension Spring** between the **Muffler** and the **Inlet Pipe**.
3. Slide the **4.5" Clamp** over the **Muffler**. Then slide the new system in from the rear of the bike until the **Inlet Pipe** slides over the original head pipe, ensure that the stock gasket is still in place on the original head pipe.
4. Install the **Muffler** with the **4.5" Clamp** using the **Hex Bolt M8X60, M8 Washer** and **Spacer**. Leave the bolt loose for now.
5. The **Muffler** and the **Inlet Pipe** can be twisted slightly so that no part of the new exhaust touches the frame.
6. Install the two original springs at the front cup – now tighten the complete system.

**Congratulations!** You are ready to begin experiencing the improved performance and driving excitement of your MBRP Ltd. ATV Exhaust upgrade. We know you will enjoy your purchase.