


# AT-6508SP

SPORT MUFFLER - SLIP-ON, POLARIS  
2000-2011 SCRAMBLER 500 4X4  
2001-2006 SCRAMBLER 500 2X4

# MBRP

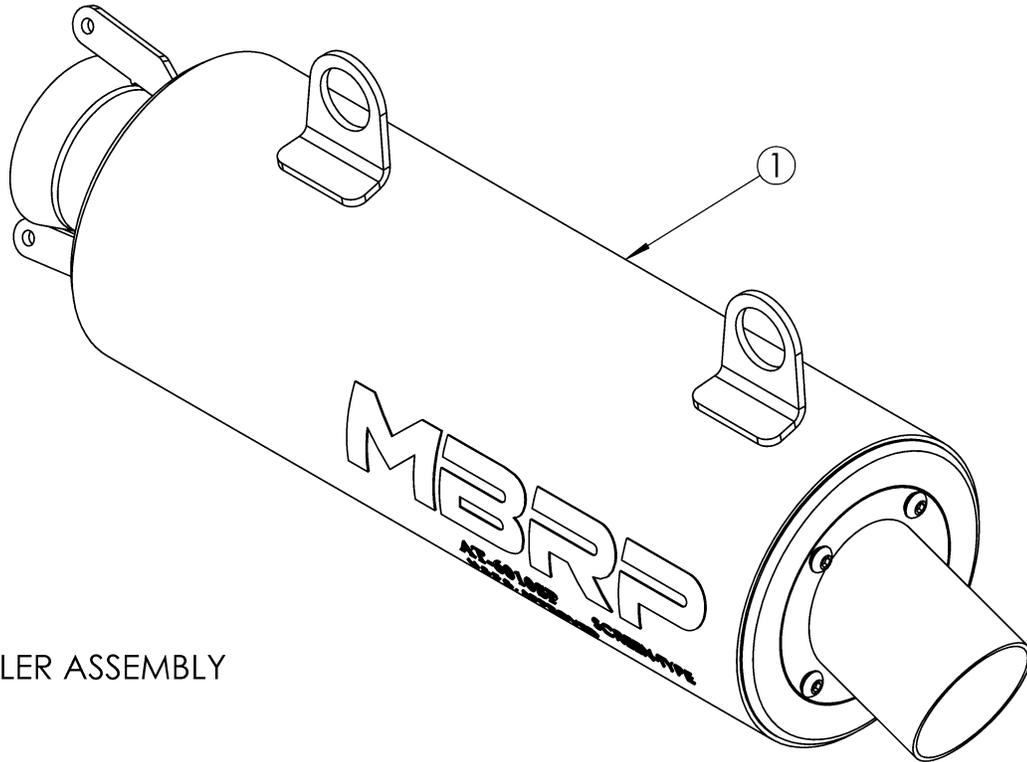

1. MUFFLER ASSEMBLY

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.



### Removal of Stock Exhaust

1. Remove the springs securing the main muffler inlet to the exhaust pipe. Do not discard springs or the gasket.
2. Remove bolts attaching the muffler to the bike and remove the muffler. Do not discard the bolts. Ensure the gasket remains on the front pipe – it will be reused.

### Installation of MBRP Exhaust

1. Position the **Muffler** inlet onto the exhaust pipe gasket and secure it using the springs previously removed.
2. Attach the **Muffler** brackets onto the stock dampener and bushing using the previously removed stock bolts.

**Congratulations!** You are ready to begin experiencing the improved performance and driving excitement of your **MBRP** Ltd. ATV Exhaust upgrade. We know you will enjoy your purchase.

## Spark Arrestor Maintenance

In order to maintain optimal performance, the spark arrestor screen should be cleaned after the first 3 hours of use. Afterwards, clean every 30-35 hours of use.

### Clean-out Instructions:

Make sure the vehicle is cool before completing the clean-out procedure.

1. Using a 1/8" hex key, remove the 4 screws securing the outlet cap. (Figure 1).
2. Remove the outlet cap to expose the spark arrestor screen insert. (Figure 2)
3. Remove the screen insert. (Figure 3)
4. Using a wire brush, thoroughly brush the screen to remove residue. (Figure 4)
5. Replace the screen and cap.
6. Tighten the screws to 23 in-lbs (2.6 Nm).



**Figure 1**



**Figure 2**



**Figure 3**



**Figure 4**