


# AT-7108

UTILITY MUFFLER - SLIP-ON SYSTEM  
89-91, HONDA TRX 300 FOURTRAX (ALL MODELS)

# MBRP

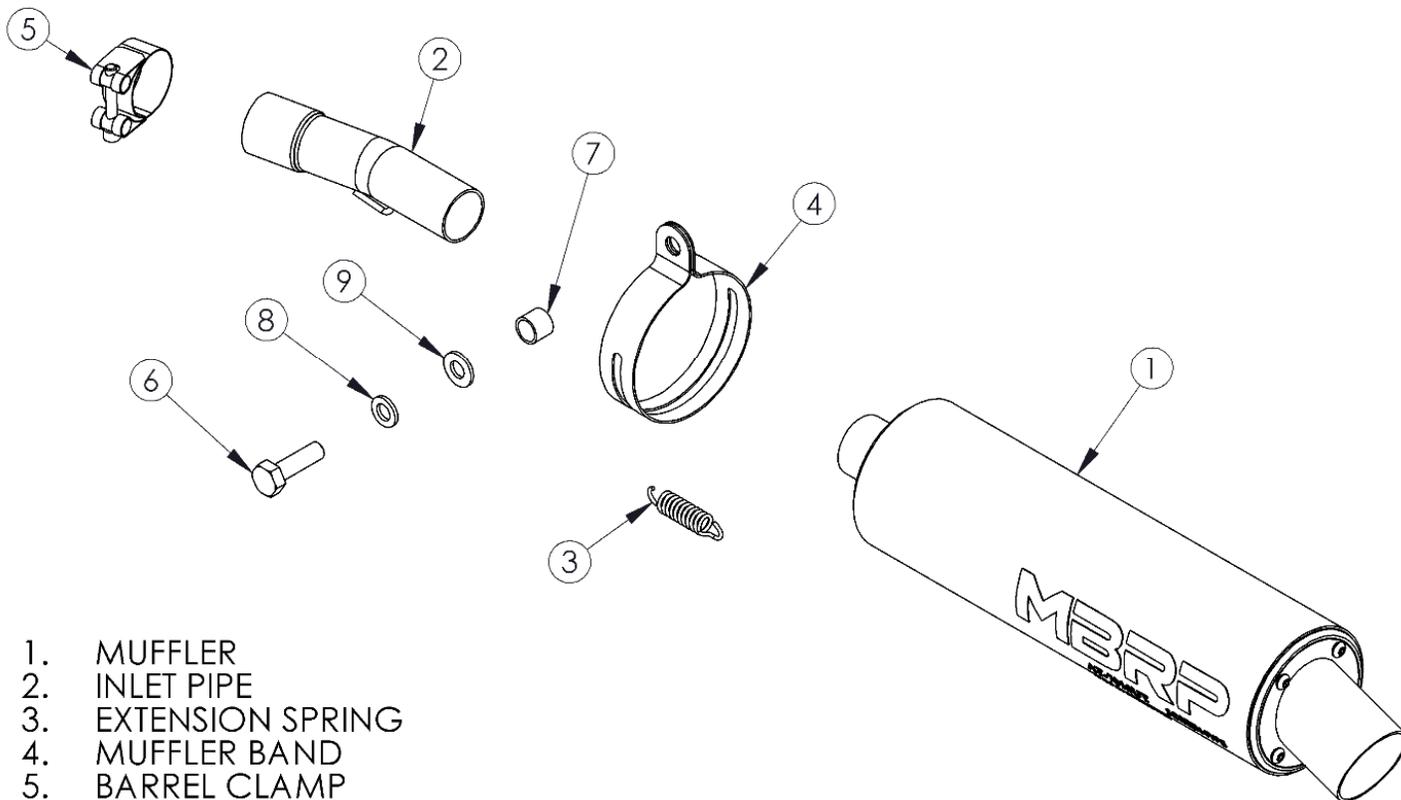

1. MUFFLER
2. INLET PIPE
3. EXTENSION SPRING
4. MUFFLER BAND
5. BARREL CLAMP
6. HEX BOLT (M10 X 35MM)
7. SPACER TUBE
8. LOCKWASHER
9. FLAT WASHER

## PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Ltd. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

# MBRP



Figure 1

## Removal of Stock Exhaust:

**\* The original head pipe needs to be cut to install this exhaust system.**

1. Cut the head pipe 6.5" back from the bracket #1 on bike (a Sawzall or hacksaw will work fine).
2. Unbolt the original part of the system off of the frame from your cut point back.
3. Remove the original part of the exhaust system from the bike.
4. De-burr the end of the cut pipe with file.
5. Clean any rust scale off of the pipe where the new system slides on.

## Installation of MBRP Exhaust:

1. Slide the **Inlet Pipe** into the **Muffler** so the **Spring** tabs line up on both.
2. Install the **Spring**.
3. Slide the new **Clamp** provided over the new **Inlet Pipe**.
4. From the rear of the bike, slide the new system over the original head pipe as far as it will go – twist the exhaust system back and forth to get it on all the way.
5. Slide the **Muffler band** over the **Muffler** and mount it to the frame using the **M10 x 35mm Bolt** and the **5/8" Spacer tube** supplied.
6. Tighten the **Clamp** on the **Inlet Pipe**.



Figure 2

**Congratulations!** You are ready to begin experiencing the improved performance and driving excitement of your MBRP Ltd. ATV Exhaust upgrade. We know you will enjoy your purchase.