


AT-7201

UTILITY MUFFLER - SLIP-ON
1988-2004 KAWASAKI KLF 300 BAYOU
1989-2004 KAWASAKI KLF 300 BAYOU 4X4

MBRP

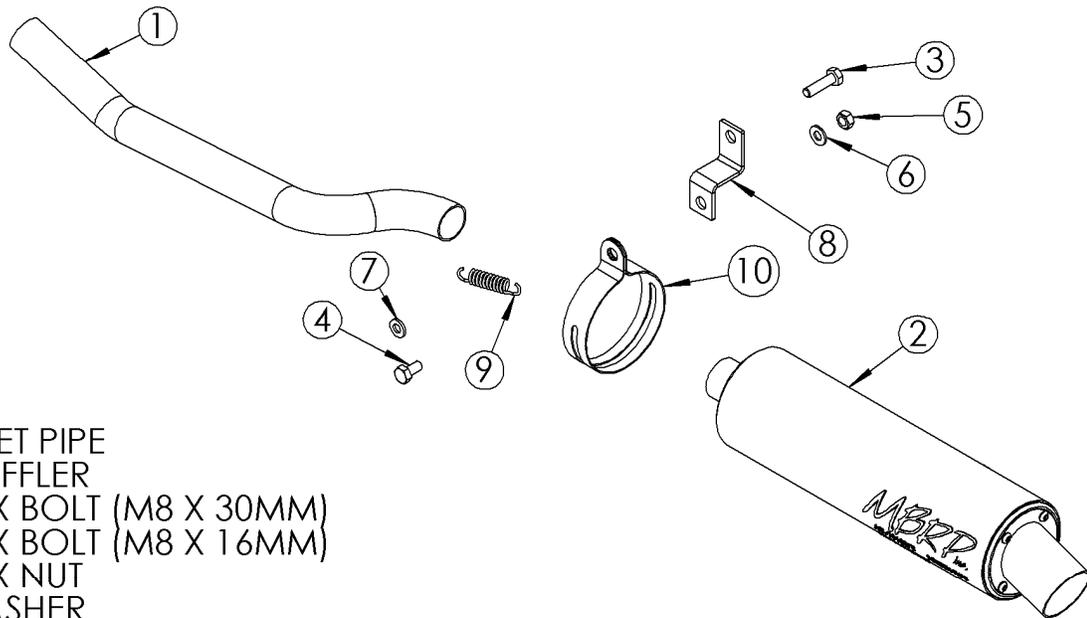

1. INLET PIPE
2. MUFFLER
3. HEX BOLT (M8 X 30MM)
4. HEX BOLT (M8 X 16MM)
5. HEX NUT
6. WASHER
7. LOCK WASHER
8. S-BRACKET
9. EXTENSION SPRING
10. MUFFLER BAND

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP

AT-7201 – 1988-2004 KLF 300 Bayou

Removal of Stock Exhaust:

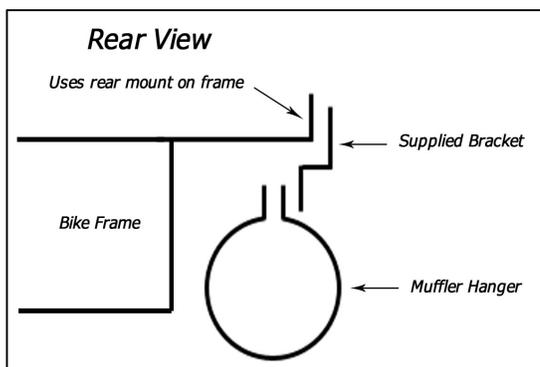


Figure 1

1. Remove the clamp at the slip joint ahead of the muffler.
2. Remove the bolts holding the muffler.
3. Pull the system out of the rear of the bike and remove the metallic gasket from the slip joint.
4. Remove the intermediate section of the exhaust that was bolted to the frame and the head pipe.

Installation of MBRP Inc. Exhaust:

1. On the bench, slide the **Inlet Pipe** into the expanded end of the **Muffler** so that the spring mounts line up on both.
2. Install the **Spring**.
3. Slide the original clamp over the head pipe.
4. Now slide the new exhaust system in from the rear of the bike until the **Inlet Pipe** slides inside of the original head pipe. (The **Muffler** and the **Inlet Pipe** can be twisted slightly so no part of the new exhaust touches the frame.)
5. Hang the **Muffler** using the **Muffler band, S-bracket,** and the supplied hardware.
6. Finally, tighten the clamp on the head pipe.

Congratulations! You are ready to begin experiencing the improved performance and driving excitement of your MBRP Inc. ATV Exhaust upgrade. We know you will enjoy your purchase.