


**AT-6512SP / AT-8512P**  
**SPORT / PERFORMANCE MUFFLER**  
**SLIP-ON SYSTEM**  
**2008-2009 POLARIS SPORTSMAN 800**

**MBRP**  
*INC.*  
PERFORMANCE EXHAUST

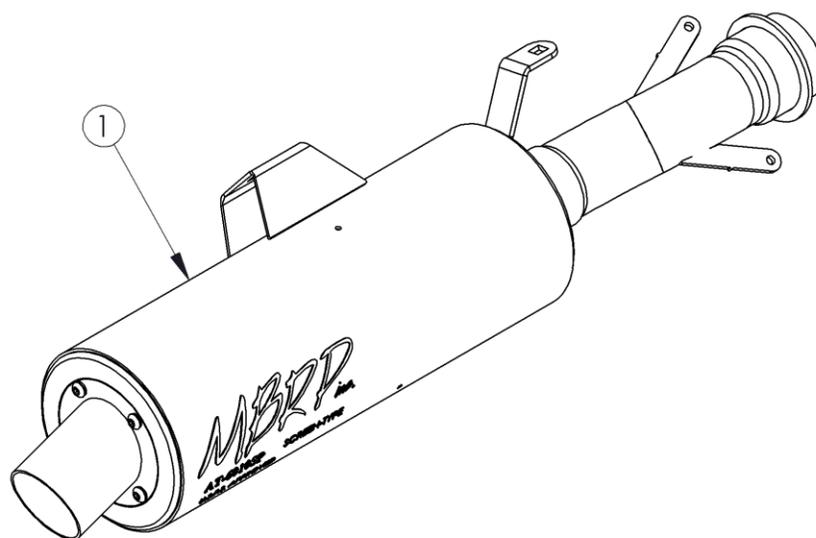

## 1. MUFFLER

### **PLEASE READ BEFORE STARTING INSTALLATION**

**While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:**

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your year and model of bike.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your bike please contact your dealer before commencing installation.



### **Removal of Stock Exhaust:**

1. Loosen the clamp on the inlet pipe of the secondary (LHS) muffler and remove the muffler.
2. Remove the springs securing the main muffler inlet to the exhaust pipe. Do not discard the springs or the gasket.
3. Remove the bolts attaching the muffler to the bike and remove the muffler. Do not discard the bolts.

### **Installation of MBRP Inc. Exhaust:**

1. Place the gasket that was previously removed onto the inlet pipe of the **Muffler**.
2. Position the **Muffler** inlet onto the end of the exhaust pipe and secure it using the springs previously removed.
3. Attach the **Muffler** brackets to the bike using the bolts that were previously removed.

**Congratulations!** You are ready to begin experiencing the improved performance and driving excitement of your MBRP Inc. ATV Exhaust upgrade. We know you will enjoy your purchase.