


AT-9528PT

PERFORMANCE MUFFLER, 5", w CATALYTIC CONVERTER
2020-UP POLARIS RZR PRO XP
2022-2024 POLARIS RZR TURBO R
2025-UP POLARIS RZR PRO S

MBRP

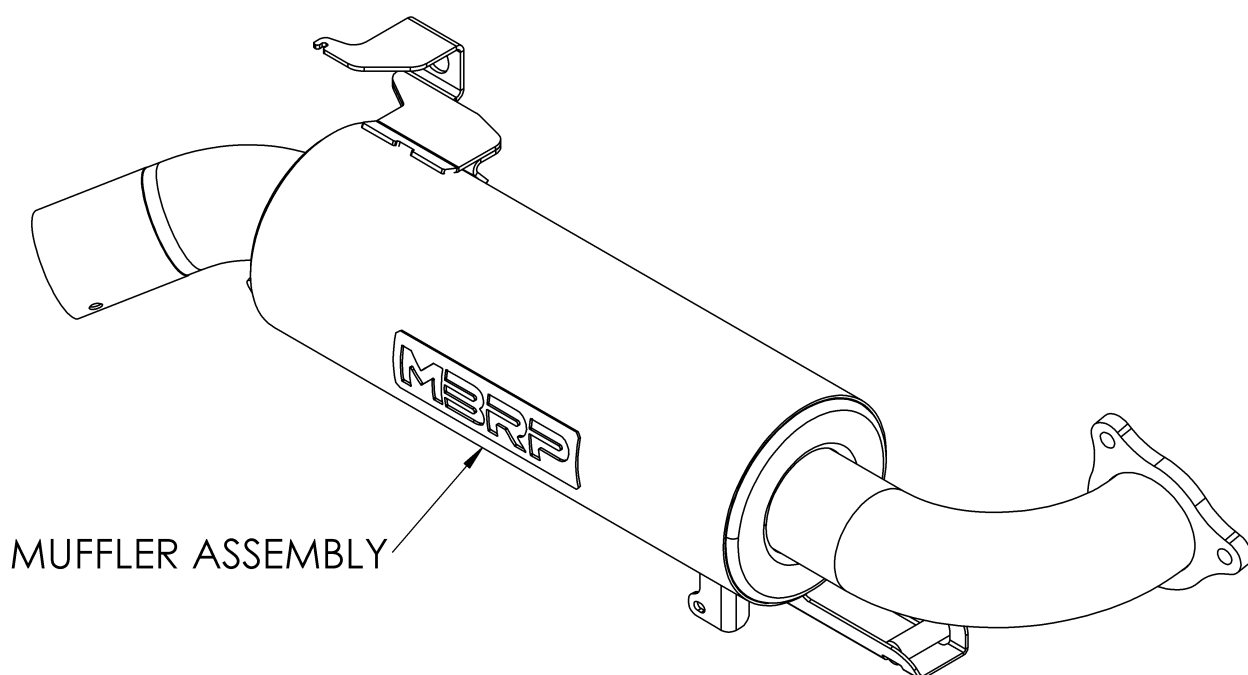

Refer to this LOT NUMBER when contacting customer service: _____

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Ltd. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP

Removal of Stock Exhaust:



Figure 1



Figure 2



Figure 3

1. Remove the rear panel covering the muffler. Do not discard the fasteners.

Refer to Figure 1.

2. Remove the three (3) nuts securing the muffler inlet to the exhaust pipe. Do not discard them. Leave the gasket on the vehicle exhaust pipe.

3. Remove the upper and lower springs securing the muffler to the vehicle. Do not discard the springs.

4. Remove the muffler by sliding the hangers out of the rubber isolators.

5. Remove the stock spark arrestor from the muffler outlet and keep all parts.

Installation of MBRP Exhaust:

1. Slide the hanger rods into the rubber isolators on the vehicle and mate the **Muffler Assembly** inlet pipe to the end of the exhaust pipe. **Refer to Figure 2.**

2. Secure the **Muffler Assembly** by attaching the previously removed spring at the top location. **Refer to Figure 3.**

3. Re-install the lower spring to the tab on the mounting bracket.

4. Secure the inlet using the previously removed stock nuts.

5. Install the stock spark arrestor into the **Muffler Assembly** outlet using the stock hardware.

6. Re-install the rear panel.

Note: To maintain optimal performance, the spark arrestor screen should be cleaned after the first 3 hours of use, then every 30-35 hours of use.



Congratulations! You are ready to begin experiencing the improved performance and driving excitement of your MBRP Exhaust upgrade. We know you will enjoy your purchase.