


S5014

03-07 CHEV/GMC 1500 HD, 4.8L/5.3L
EXTENDED CAB/CREW CAB-SHORT BOX,
3" SINGLE SIDE

MBRP
INC.
PERFORMANCE EXHAUST

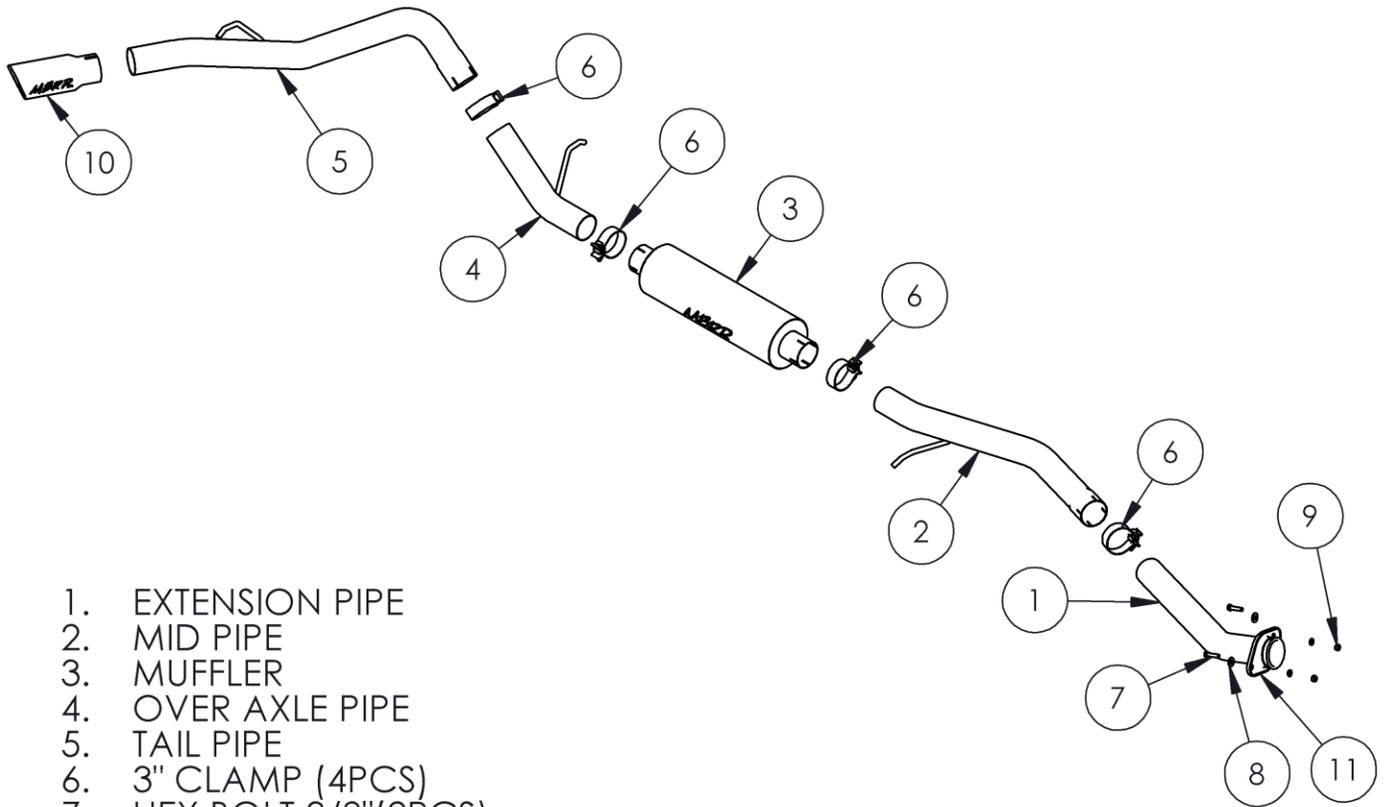

1. EXTENSION PIPE
2. MID PIPE
3. MUFFLER
4. OVER AXLE PIPE
5. TAIL PIPE
6. 3" CLAMP (4PCS)
7. HEX BOLT 3/8" (2PCS)
8. LOCK WASHER (2PCS)
9. HEX NUT 3/8" (2PCS)
10. EXHAUST TIP
11. 2 BOLT FLANGE

NOTE: SADDLE CLAMPS USED IN ALUMINIZED SYSTEMS

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.



Removal of stock system:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Remove the nuts from the studs holding the front flange together and disconnect exhaust system.
3. Remove the hangers from the rubber insulators and remove the exhaust from the vehicle. If a hoist or hydraulic lift is not being used the tail pipe may need to be cut to clear the rear axle.
4. The studs located in the exhaust flange must be removed. This can be accomplished using a hammer. The studs will be replaced by the hardware supplied with the system.

Installation of MBRP Inc. Performance Exhaust:

1. Slide the **2 Bolt Flange** over the **Extension Pipe** and loosely attach the **Extension Pipe** at the flange using the hardware provided.
2. Using a **3" Clamp**, loosely attach the **Mid Pipe** to the **Extension Pipe** and attach hanger to rubber insulator located on the frame.
3. Using a **3" Clamp**, install the **Muffler** onto the **Mid Pipe**. With another **3" Clamp**, install the **Over Axle Pipe** into the opposite end of the **Muffler**. Insert the hanger into the factory rubber insulator located above the rear of the **Muffler**.
4. Feed the **Tail Pipe** over the axle and loosely attach it to the **Over Axle Pipe** using a **3" Clamp**. Insert the **Tail Pipe** hanger into the factory rubber insulator located directly above the hanger.
5. Install the **Exhaust Tip**. It is recommended to install them at this point to assist with the final system alignment.
6. Align the exhaust as required before tightening clamps.
7. Starting at the front of the exhaust, tighten all clamps and connections.
8. Check along the whole length of the exhaust system to ensure that there is adequate clearance around the spare tire, fuel and brake lines or any wiring. If any interference is detected, relocate or adjust.

Congratulations! You are ready to begin enjoying the improved performance and driving experience of your MBRP Inc. Performance Exhaust system. We hope you enjoy your purchase.