


T5195CF

2018-2021 KIA STINGER GT 3.3L,
4.0", QUAD TIPS

MBRP®

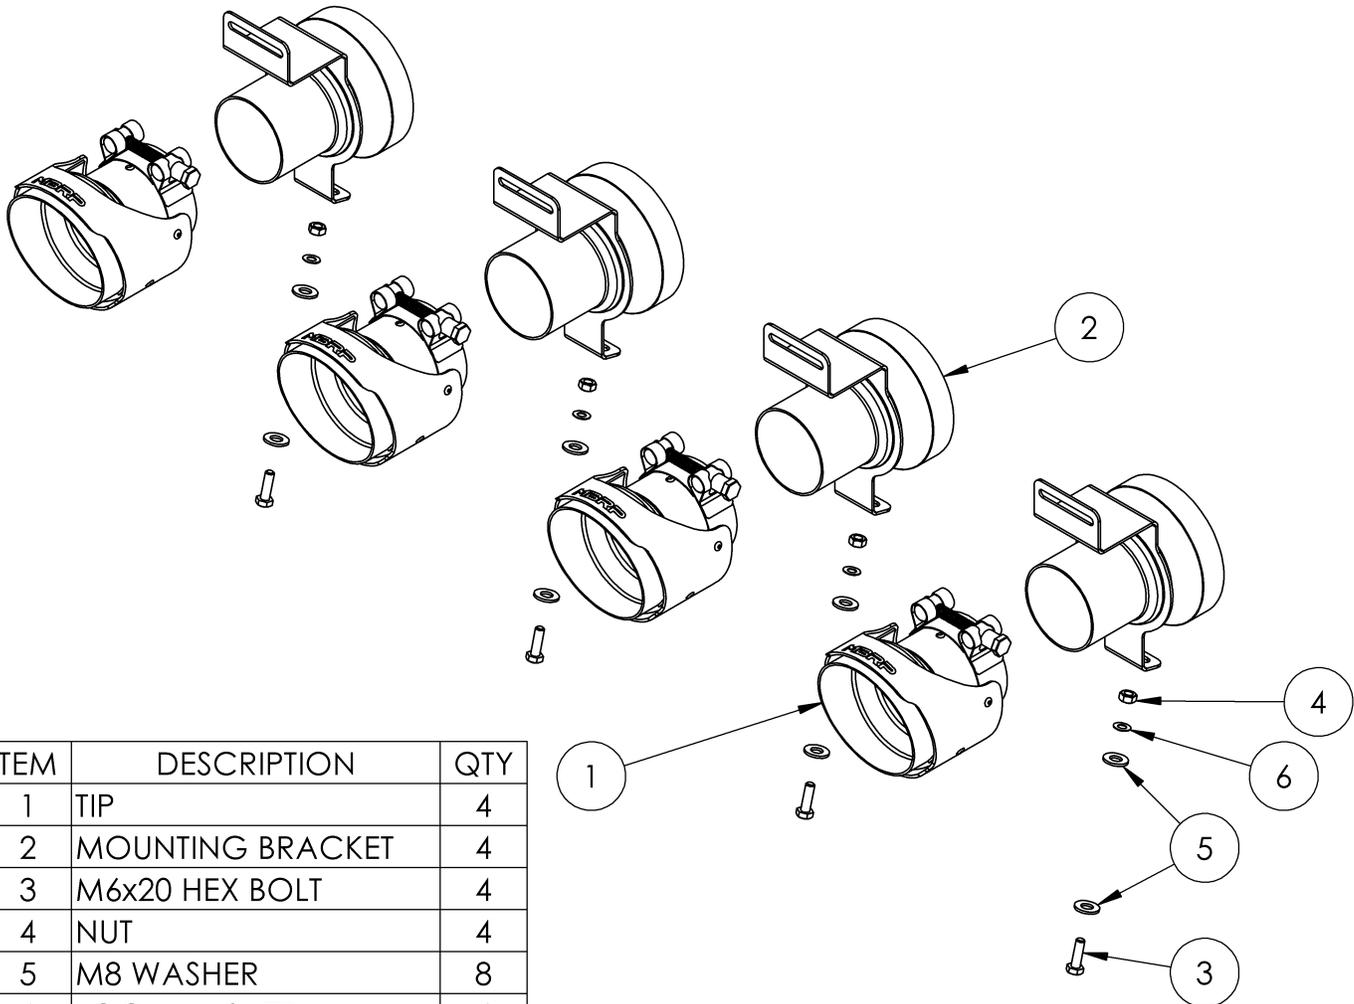

ITEM	DESCRIPTION	QTY
1	TIP	4
2	MOUNTING BRACKET	4
3	M6x20 HEX BOLT	4
4	NUT	4
5	M8 WASHER	8
6	LOCK WASHER	4

Refer to this LOT NUMBER when contacting customer service: _____

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

MBRP

Removal of Stock System



Figure 1

1. Apply penetrating lubricant liberally to all exhaust fasteners, hangers, and rubber insulators.

2. Remove the nuts from the rear muffler flanges and cross-brace. Remove the rear mufflers from the insulators and from the vehicle. Refer to Figure 1.



Figure 2

3. Remove the factory exhaust bezels from the fascia by removing the two bolts from underneath and the two screws at the top. The top screws are very difficult to access, you may need an offset screwdriver depending on the length of screwdriver you have available.

Refer to Figure 2.

Installation of MBRP Performance Exhaust



Figure 3

1. Remove the **Clamps** from the **Tips** and place them on the **Mounting Brackets**. The outside **Clamps** should have the hex of the bolt facing outwards, the inner **Clamps** should have the hex facing inwards. Refer to Figures 3 & 4.



Figure 4

2. Using the supplied **Hardware** and original top screws, loosely install a **Mounting Bracket** in each fascia opening. Refer to Page 1 and Figures 3 & 4.

MBRP



Figure 5



Figure 6



Figure 7



Figure 8

3. Place a **Tip** onto each **Mounting Bracket** and into each **Clamp**. Refer to **Figure 5**.

4. Tighten the **Clamps** enough to just secure the tips, but allow for some adjustment.

5. Adjust the position of the **Mounting Brackets** and **Tips** for the best appearance and clearance, centered in the fascia openings. The **Mounting Bracket** attachments are slotted to allow for fine tuning. Refer to **Figures 6-8**.

6. Once you are satisfied with the **Tip** alignment, tighten all mounting hardware, starting with the upper screws. Refer to **Figures 6-8**.



Congratulations! You are ready to begin experiencing the appearance and driving experience of your **MBRP** Performance Exhaust. We know you will enjoy your purchase!