


SL9212-01

2016-2025 CAN-AM DEFENDER,
ROOF LIGHT KIT

MBRP®

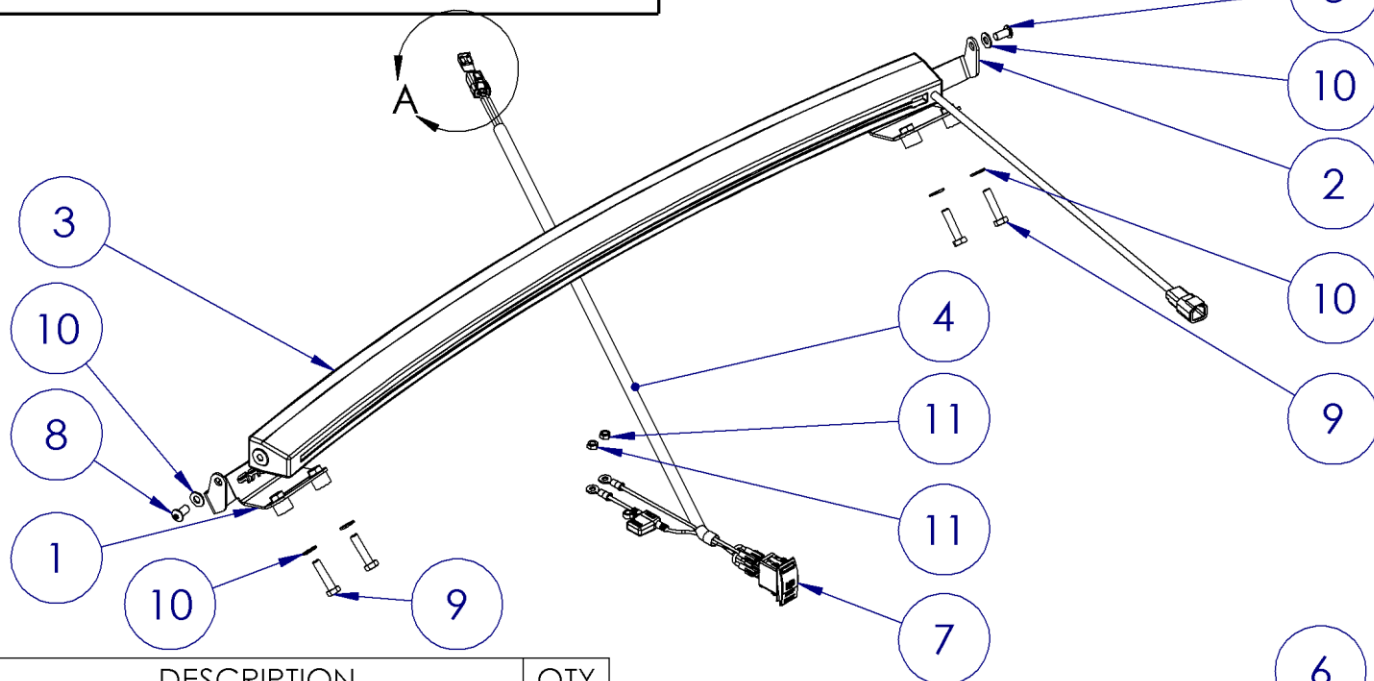

ITEM	DESCRIPTION	QTY
1	LEFT-HAND LIGHT BRACKET	1
2	RIGHT-HAND LIGHT BRACKET	1
3	LIGHT BAR	1
4	WIRING HARNESS	1
5	CONNECTOR	1
6	WEDGE LOCK	1
7	SWITCH	1
8	M8x16 SCREW	2
9	M8X35 BOLT	4
10	M8 WASHER	6
11	M6 NUT	2

DETAIL A
SCALE 1 : 2

Refer to this LOT NUMBER when contacting customer service: _____

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this kit are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before installation;

- that ALL components shown above are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the product you have purchased is appropriate for your vehicle year, model and configuration.
- that the product will not interfere with any modifications previously installed or planned.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this kit to your vehicle please contact your dealer before commencing installation.

MBRP

Installation



Figure 1



Figure 2



Figure 3



Figure 4

1. Disconnect negative battery lead.
2. Remove the overhead console trim panel [If equipped].
Refer to Figure 1.
3. Remove the driver-side windshield hinge hardware and discard. Install the **Left-Side Light Bracket** on top of the hinge [if equipped] and secure with the supplied **M8 Washers** and **M8x35 Bolts**. Repeat for **Right-Side Light Bracket**.
Refer to Figures 1 and 2.
4. Install the **Light Bar** onto the **Light Brackets** with the supplied **M8x16 Screws**. The electrical connector must be on the right-hand side of the SxS,
Refer to Figure 3.
5. Remove the center console switch panel to allow access to the accessory power studs.
Refer to Figure 4.
6. Remove the glove box and route the Wiring Harness to the center console area. Remove a switch knockout and route the spade terminals through the opening.
Refer to Figures 4 and 5.

MBRP

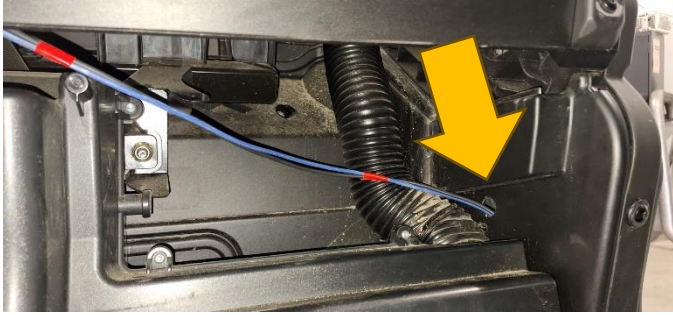


Figure 5

PIN	COLOR
2	RED
3	BLUE
6	RED
7	BLACK
8	BLACK

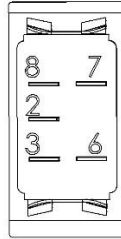


Figure 6



Figure 7



Figure 8

7. Connect the spade terminals to the **Switch** following the wiring color/pin assignments. Push the **Switch** into the center console switch panel.
Refer to Figures 6 and 7.
8. Connect the positive red wire to the accessory power post, and the black wire to the negative ground post.
Secure with **M6 Nuts**.
9. Reinstall the center console switch panel.
10. Drill a 1/2" hole behind the glove box area and route the **Wiring Harness** into the right side panel, down under the door sill, and up to the right rear cage tube. Trim panel disassembly is required.
Refer to Figures 5, 8 and 9.

MBRP



Figure 9



Figure 10

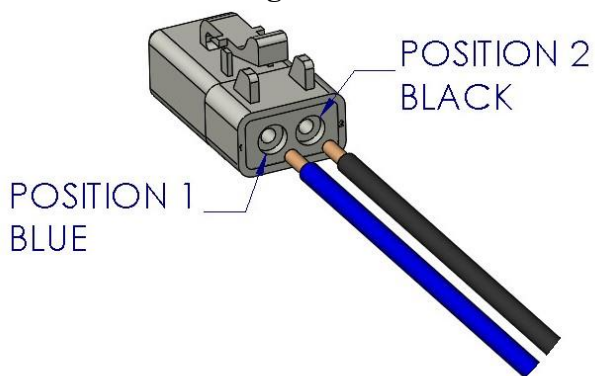


Figure 11

11. Drill a 1/2" hole at the top of the right rear cage tube from the interior to aid in routing the **Wiring Harness**. Refer to Figure 10.
12. Feed the bare terminal end of the **Wiring Harness** into the base of right rear cage tube. Once the terminals are visible in the 1/2" hole drilled in step 11, use a pick or similar to guide the wires up and out of the top of the cage tube. Refer to Figures 9 and 10.
13. Push the wire terminals through the back of the **Connector**. Be sure to follow the color/pin assignment. Once fully seated, install the green **Wedge Lock** with needle nose pliers to secure the terminals in the connector. Refer to Figure 11.
14. Route the **Wiring Harness** under the roof panel to the **Light Bar** and connect.
15. Reconnect negative battery lead.

Congratulations! You are ready to experience the improved performance of your **MBRP** Accessory Lighting kit. We know you will enjoy your purchase!

